


inside i-Guide™

User's Reference Manual

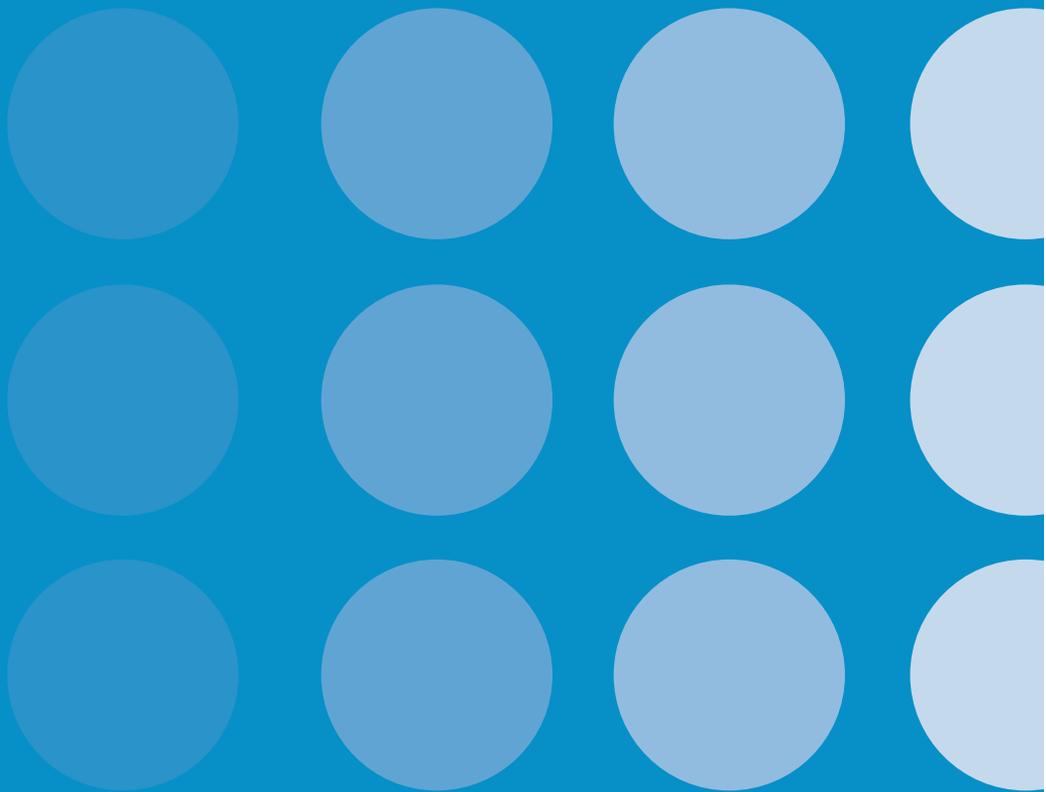

Welcome to i-Guide™.

Introducing the all-new interactive program guide from **TV Guide** and your cable system. **i-Guide™** is intuitive, intelligent and inspiring. It unlocks a world of greater choice, convenience and control as you watch television.

With **Digital Cable**, you have more programming choices than ever before. And with **i-Guide**, you can effortlessly find the television entertainment you want to see. **i-Guide** puts you in control, all at the touch of a button.

i-Guide displays 90 minutes of program listings. Best of all, it's so easy to use, you won't need a degree in computer science to find out what's on. **i-Guide's Quick Menu** allows you to move easily to the programming and information you want. In no time, you'll be able to set **Reminders**, **Favorites**, **Parental Controls** and use our **Mini Guide** to find out what's next, while you continue to enjoy great TV.

With **i-Guide**, the world of television is at your fingertips.

1	<i>Welcome</i>
2	Table of Contents
6	Basic i-Guide Navigation Tips
6	Remote Control Features
7	Your Access to Digital Cable
7	Quick Menu
7	Circular Navigation and Help Text
7	Main Menu
7	Picture in Guide
7	On-Screen Program Guide
8	Quick Menu Icons
9	Search Categories and Listings
9	Listings by Time
10	Navigating Listings
10	Listings by Channel
10	A-Z Title Search
10	Adult Programming
11	Program Information
12	Action Icons
13	Reminders
13	Setting Reminders
13	Reminder Settings
14	Smart Channel Surfing
14	Flip
14	Mini Guide (Browse)
15	Digital Music
16	Local Weather
16	Messages
17	Parental Controls
17	Parental Controls Setup
17	Parental Controls for On Demand
18	View Locked Programs
18	Bypass or Clear Locks
18	Restore Locks

19	Favorites
19	Set Up Favorites Lists
19	Access Favorites Lists
20	Add or Delete Channels to Favorites Lists
21	Setup
21	Guide Setup
22	Cable Box Setup
22	Audio Setup
23	Text Language Setup
23	Screen Saver
24	Screen Position Setup
24	PINs Setup
25	Digital Pay-Per-View (PPV) (Optional Feature)
26	Order Pay-Per-View By Phone
26	Order Pay-Per-View Packages
26	Cancel a Pay-Per-View Order
27	Pay-Per-View Notices
28	On Demand (Optional Feature)
28	Access On Demand
29	Order On Demand Programs
29	Order From the On Demand Preview Banner
29	Expiring Programs Display
30	Watch On Demand Programs
30	Status Bar
31	On Demand Packages
32	HDTV (Optional Feature)
33	Digital Video Recording (DVR) – Dual Tuner (Optional Feature)
33	Control Live TV
33	Playback Controls
34	Remote Control Arrow Buttons
34	Status Bar
34	Pause
35	Rewind
35	Fast Forward


36	Slow Motion
36	Instant Replay
36	Return to Live TV
36	Swap Between Two Programs
37	Personal Video Library
37	Building Your Library - Recording Programs
37	One-Touch Record
37	Record From Program Information
37	Manually Schedule a Recording
38	Record Two Programs at Once
38	While Watching a Show
38	From the Guide
38	Record a Series
38	Modify the Series Priority List
39	Manage Schedule Conflicts
39	Manage Series Priority Lists
39	View List of Scheduled Recordings
40	Modify Recording Options
41	Recording Notices
41	Swap Icon on Stop Recording Notice
41	View Programs Stored in Your Personal Video Library
42	Manage Your Personal Video Library
43	Digital Video Recording (DVR) – Single Tuner (Optional Feature)
43	Control Live TV
43	Playback Controls
44	Remote Control Arrow Buttons
44	Pause
44	Rewind
44	Fast Forward
45	Slow Motion
45	Instant Replay
45	Return to Live TV
45	Personal Video Library
45	Building a Library - Recording Programs

45	One-Touch Record
46	Record From Program Information
46	Manually Schedule a Recording
46	Manage Scheduling Conflicts
46	View List of Scheduled Recordings
47	Modify Recording Options
49	Recording Notices
50	View Programs Stored in Your Personal Video Library
51	Manage Your Personal Video Library
52	Frequently Asked Questions
52	Interactive Program Guide
53	On Demand (Optional Feature)
53	DVR and Digital Services
54	DVR and Digital Services – Dual Tuner
55	Dual Tuner DVR Recording and Playback of Recorded Programs
56	Single Tuner DVR Recording and Playback of Recorded Programs
57	Managing Your Recordings
58	Controlling Live TV
58	Troubleshooting

Basic i-Guide Navigation Tips

- Yellow is always the highlight color. As you navigate listings using your remote, the highlight appears on-screen to indicate your current selection.
- Press the **▲▼◀▶** buttons on your remote to move the highlight.
- Press **OK/Select** to make your selection.
- Press the **EXIT** button on your remote to return to watching TV.

Remote Control Features

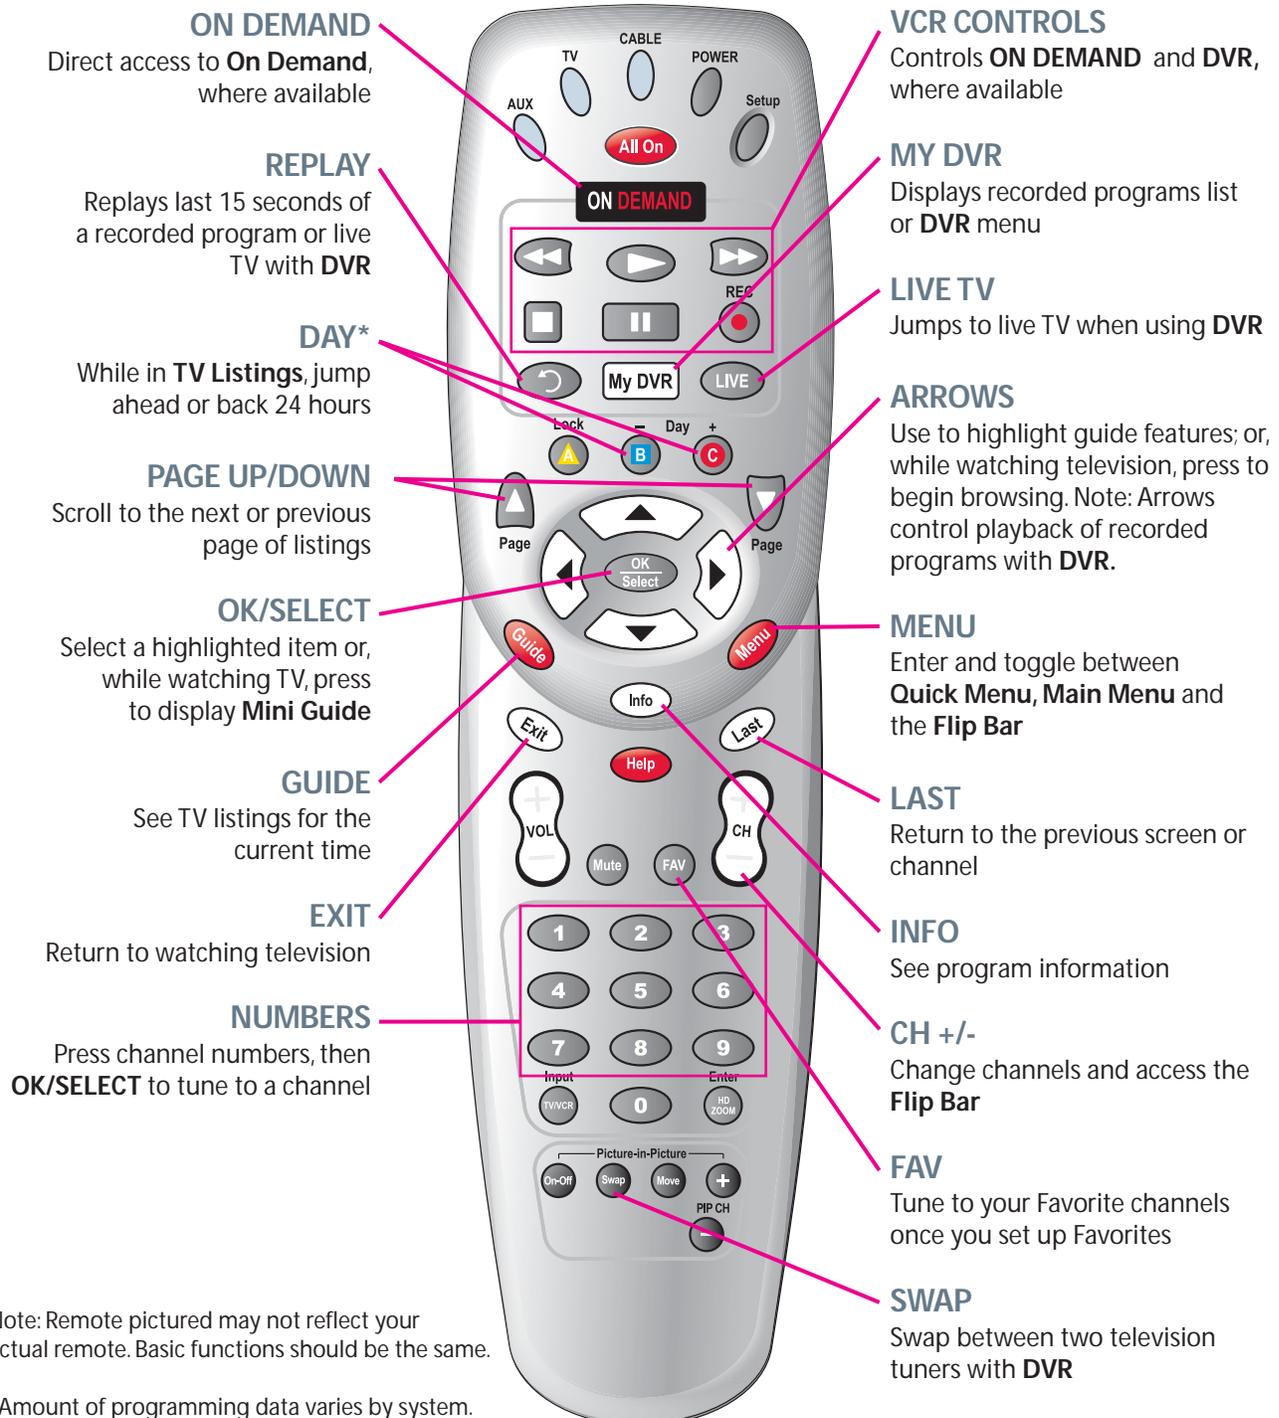

Your Access to Digital Cable

Quick Menu

The **Quick Menu** feature provides shortcuts to the key features of your program guide and digital cable service. The **Quick Menu** will appear over any video or guide screens when the **MENU** button on your remote is selected. The **Quick Menu** is designed to allow you to go directly to **i-Guide** features without having to navigate through a series of menus.



Circular Navigation and Help Text

Press either the right or left arrow ◀▶ button on the remote control to continuously move through the icons. To help you become familiar with the icons on the **Quick Menu**, help text calls out the icon name in yellow and describes the function in white.



Main Menu


The **i-Guide's Main Menu*** gives you easy access to all the features of digital cable. Simply press **MENU** twice on your remote, then select from the options available, including **TV Listings By Time**, viewing options by category, **Search**, **Favorites**, **Local Weather** and more.

Picture in Guide

Your **i-Guide** provides you with a **Picture in Guide** feature displaying the programming you were watching while in the guide.** Never miss what's happening while you search for what's on, schedule recordings or get more information.

On-Screen Program Guide

The on-screen guide is your source for finding out what's on your digital cable service. The guide provides 90 minutes of listings on each screen. As you navigate throughout the guide, your current selection is highlighted in yellow and a program or feature description appears on-screen. Press **GUIDE** on your remote to access **Listings By Time**.

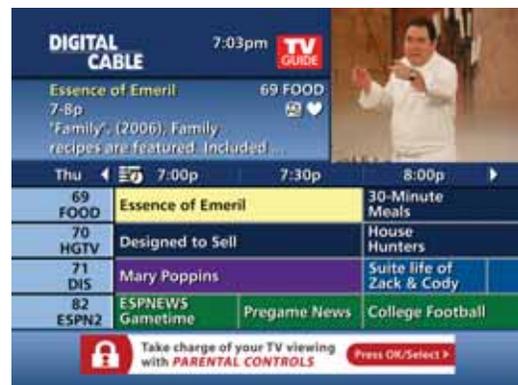

*Menu selections vary depending on the services your cable provider offers.

**May not be supported by all set-top boxes.

Guide Symbols to Know – Quick Menu Icons

These icons may appear on **Quick Menu***. Highlight and select an icon with your remote and you will immediately access the area indicated.


 Main Menu	 Digital Recordings Menu
 Search Menu	 On Demand Menu
 Pay-Per-View Menu	 Digital Music Listings
 Favorites List	 Movies Search Menu
 Kids Search Menu	 High Definition Search Menu
 Sports Search Menu	 Parental Controls

Search Categories and Listings

Finding something to watch is easy with **i-Guide**. View program listings the way you want, including **Listings By Time** and **By Channel**; or, by category such as Movies, Sports, Children and more. Select from the **Main Menu** or **Quick Menu** to begin your search.




Select **Search** to narrow your program options by theme using subcategories provided.*

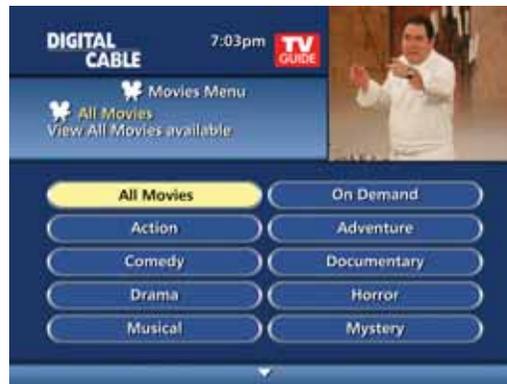

Listings By Time

TV Listings appear in a grid format with channel numbers and network call letters down the left side and times along the top. Listings are color coded to help you identify different types of programs:

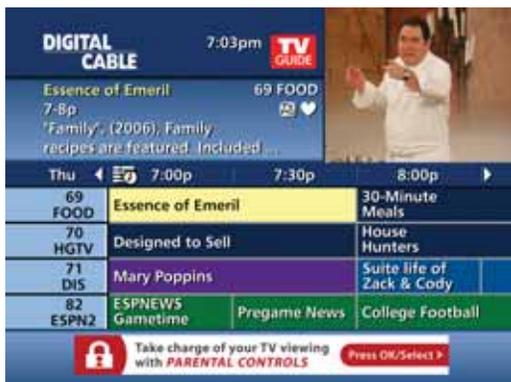

- Blue** – Regular programs
- Purple** – Movies
- Green** – Sports
- Light Blue** – Kids' programs

*Amount of programming data varies by system.

Navigating Listings

- Make a selection from one of the menus, or just press **GUIDE** on your remote to go to program listings for the current hour.
- Use the **▲▼** buttons on your remote to navigate program titles, and the **◀▶** buttons to see program listings for later that day and for future days.

For faster searching

- Use the **PAGE ▲▼** buttons on your remote to see the listings a page at a time.
- Press and hold **◀▶** to rapidly move ahead in the listings.
- Press the **DAY + - ◀▶** buttons on your remote to advance ahead a day at a time.
- Highlight a program title and press **OK/Select**. If the program is on now, you will tune to it. If the program is on later, you will see an information screen that provides program details and other features.
- Press **INFO** on your remote to see detailed program information for any highlighted title.



Listings By Channel

- Select **Listings By Channel** on the **Main Menu** to see listings organized by channel.
- Press the **◀▶** buttons to see listings for the next channel in sequence.
- Use the **▲▼** or the **PAGE ▲▼** buttons on your remote to navigate listings.
- Highlight your selection and press **OK/Select** or **INFO**.

A-Z Title Search

A-Z Title Search allows you to find a specific program by entering the first few letters of the program name.

- Select **A-Z Title Search** from the **Search Menu** and use the **▲▼** buttons until the letters you want appear in the boxes.
- Advance to the next box by pressing the **▶** button on your remote.
- Continue entering letters until the program you are looking for appears in the listings.
- Press **OK/Select** to see your search results. Highlight the program you want to watch and press **OK/Select**.




Adult Programming


The **Adult** category, accessed from the **Pay-Per-View Menu**, provides access to listings for adult-oriented programming. Adult programming may be purchased as a single program or as a time-block package, depending on your cable provider's service. For your convenience, you may also restrict Adult titles from being viewed in the listings by setting **Parental Controls**. See **Parental Controls** and **Digital Pay-Per-View** section for more information.

Program Information

Instant Information is available while you view program listings so you see a brief overview of the program at a glance. **Instant Information** includes program title, start/end time, program rating, a brief program description and helpful indicators that identify your settings, such as **Reminders** 🛎️ **Recordings** 📺 and **Favorites** ❤️.

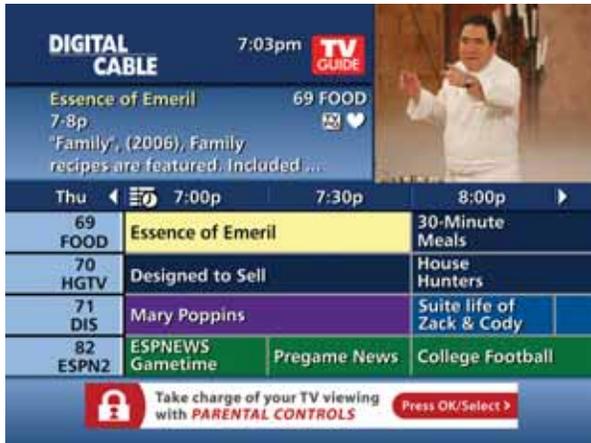

If you want to access more information on a program while viewing listings or watching TV, press the **INFO** button on your remote. Here you can read a longer description about the program as well as see additional details such as actor, rating, release year, category and run time.

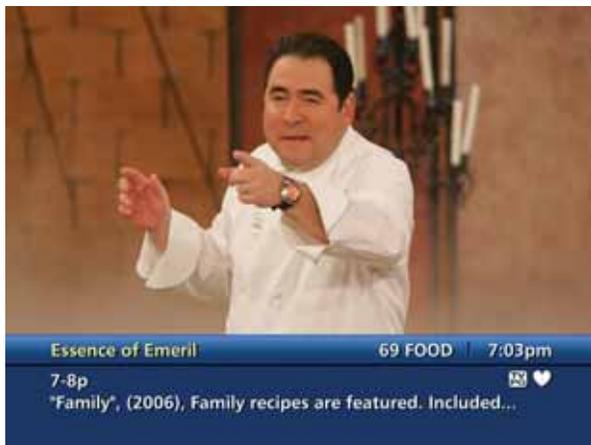


Action Icons


From Program Information, you can perform a number of actions by using the **Action Icons** at the bottom of the screen such as setting a **Reminder** or checking other air times for a program. Use the **◀▶** arrow buttons to highlight each icon and a description appears below.

Guide Symbols to Know - Action Icons

	Go back to the previous screen		See all the times the program will be airing
	Watch this channel or program		Set or cancel a Reminder for this program
	Record/Change Recording Options* (DVR)		Save the channel in your Favorites list
	Set a VCR Timer** (Non-DVR)		Order PPV, OND and other pay services
	Place a Lock on the program to restrict viewing		

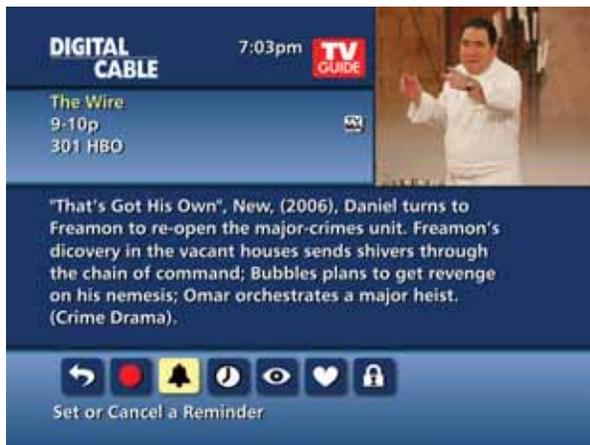

Program Information screen on DVR Set-Top box

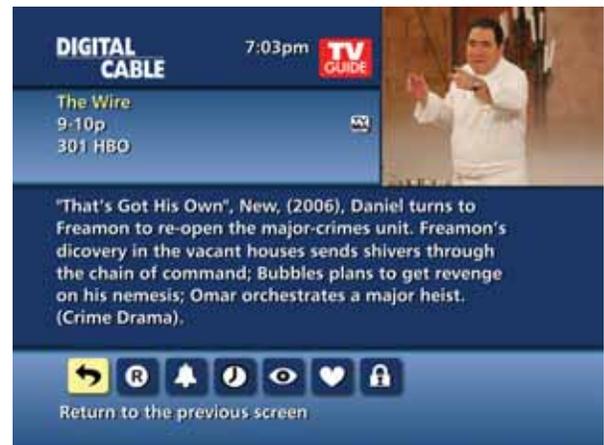

Program Information screen on Non-DVR Set-Top box

Guide Tip With the **Guide** you can look ahead to see listings and schedule recordings for programs airing in the future. The amount of data you will find varies by cable system.

* Requires use of a Digital Video Recorder.


** Requires separate VCR or DVD-R setup.

Reminders

You can set **Reminders** so you don't miss shows you want to watch.

Setting Reminders


From an information screen, highlight the  icon and press **OK/Select**. Follow the on-screen prompts to confirm the **Reminder** or view **Reminder Settings**.

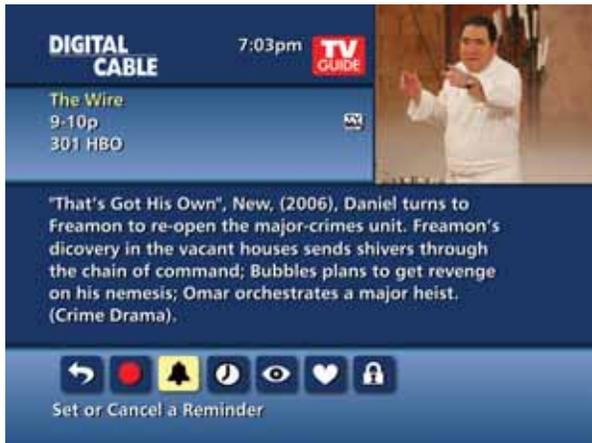

Reminder Settings

Reminder Settings let you customize the frequency and timing for **Reminders**.

- Use the **◀▶** buttons to set repeating **Reminders** that will appear once, every day, once a week, Mon-Fri or Sat-Sun.
- Determine the Start Time for the **Reminder** to appear on-screen, up to 15 minutes prior to the program starting.
- End Time enables you to extend the **Reminder** period beyond the end of the program, up to 2 hours after the program is over.
- When you set a **Reminder**, you have the option of bypassing **Locks*** placed on the program. You can then tune directly to the program from the **Reminder** without having to enter your **Locks PIN** (See **Parental Controls** section for more information).

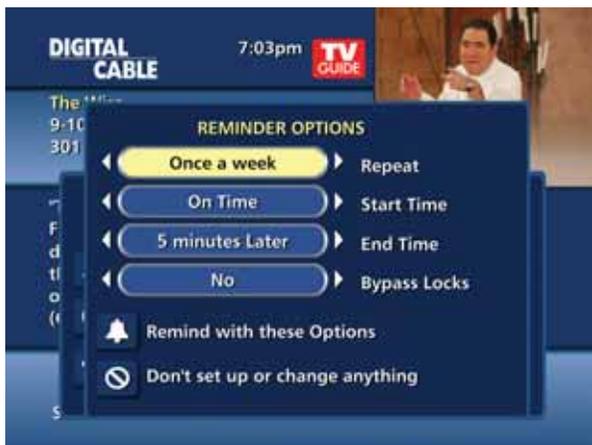


* This option appears only if you have already set a **Lock** for that program.

Smart Channel Surfing

Flip

The **Flip Bar** allows you to see program information as you change channels to help you know more about what's on. Information on the **Flip Bar** includes program name, start and end time, channel, current time and a brief program description.


- Press **CHAN** ▲▼ to change channels and see the **Flip Bar** on-screen.
- When you find a program you are interested in, press **OK/Select** to make the **Flip Bar** disappear or press **INFO** for more program details.
- To see the **Flip Bar** for the program you are watching, just press the **INFO** button on the remote.

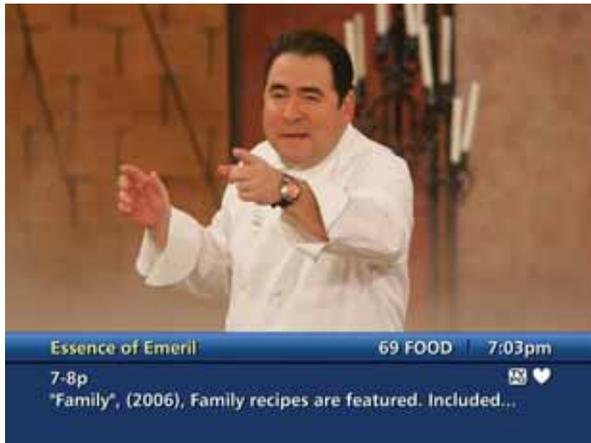

Mini Guide (Browse)

The **Mini Guide** allows you to watch television and view program listings without leaving the program you are watching or going to the full-screen guide. **Mini Guide** is seen on the lower 1/3 of your television screen and displays 2 or 3 channels and 90 minutes of listings at a time. The default setting for **Mini Guide** is a 2-channel display. To change the display setting, go to the **Main Menu**, select **Setup**, then select **Guide Setup**, and change "Mini Guide Cell Height" to Single Height for 3-channel display, or Double Height for 2-channel display. To access **Mini Guide**, press the **OK/Select** button on your remote. Use the ▲ ▼ arrows to see listings on other channels and the ◀ ▶ arrows to see listings at other times. At anytime, press **INFO** to see additional information about the program highlighted.

Guide Tip Use the **LOCK**, **FAV** and **INFO** buttons on your remote to activate these features while using **Flip** and **Mini Guide**.

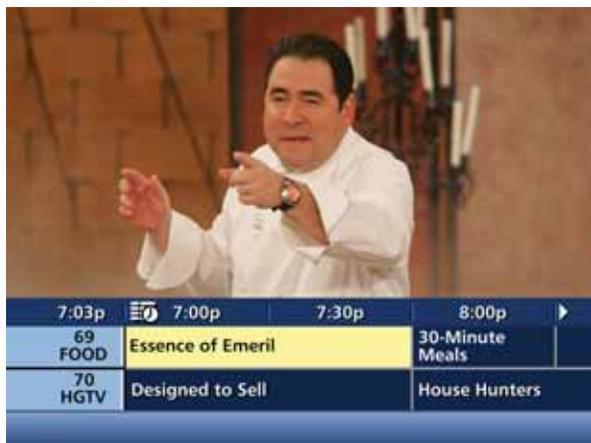

Digital Music

Digital Music is continuous, commercial-free music in a variety of formats.

Access Digital Music

- Select Digital Music from the **Main Menu** or **Search Menu**, or
- Press the  **Icon** from the **Quick Menu**** , or
- Press the **MUSIC** button on the remote if available.



Music Choice



DMX

You can press **INFO** for more information on each category. Select a music format and enjoy the music. As you're listening, press **INFO** for more information on title, track and artist. *

Guide Tip Digital Music channels may also be set as **Favorites** so you can quickly navigate through your favorite music channels. Refer to the **Favorites** section for more information.

* Where available. Some digital music providers may offer title, track and artist on-screen.

**Digital Music may not be available on all menu configurations.

Local Weather

Get accurate, up-to-date local weather conditions and a 3-day forecast.

- Highlight **Local Weather** from the **Main Menu** and press **OK/Select**.
- Use the ▼ button to see a detailed local weather forecast.

Note: Weather service not available for all locations.



Messages

Messages may be sent occasionally by your cable company to announce new services, special promotions or other information. If you have a **Message**, an envelope indicator will appear in the upper left corner on the screen and a red light will appear on your set-top box. From the **Main Menu**, select **Messages**. Highlight the desired **Message** and press **OK/Select** to read it.



Parental Controls

Parental Controls allow you to restrict viewing and purchases of TV programming based on your viewing preferences. Set a personalized 4-digit **PIN** and you can place **Locks** on selected ratings, channels and titles. You can also hide adult titles from being displayed on-screen.



Parental Controls Setup

Set **Locks** anytime in the guide or while watching television. Just press the **LOCK** button on your remote or select the **Lock** icon on the **Quick Menu** or **Info** screen. Enter your 4-digit **Parental Controls PIN** and **Lock** the channel, title or rating using the on-screen prompts.

You can also set **Locks** or adjust settings from the **Quick Menu** or **Main Menu**, or from the **Setup Menu** on the **Main Menu** – select **Setup**, then **Locks Setup**. Use the **▲▼◀▶** buttons to make your selections and then press **OK/Select** to confirm each setting.



Parental Controls for On Demand

Parental Control settings (above) include **On Demand** programming. To block all access to **On Demand**, Press **Menu** on your remote, then select **Setup**, then **Service Locks Setup**. Press **Exit** to return to program viewing.



Guide Tip

When a user selects a TV or movie rating to lock, the Guide will automatically lock that rating and the more restrictive ratings. For example, when you lock PG-13, R, NC-17 and Adult ratings are also locked.

TV Ratings	MPAA Ratings
TV-Y	G
TV-Y7	PG
TV-G	PG-13
TV-PG	R
TV-14	NC-17
TV-MA	Adult

View Locked Programs

To view programs and channels you have Locked, tune to the program or select it from the listings. Enter your **PIN** when prompted.



Bypass or Clear Locks

Temporarily open or clear all **Locks** for easier viewing. Select **Master Locks** from the **Locks Setup** under **Setup** on the **Main Menu** screen and change the options from **No** to **Yes**.



Restore Locks

Locks may be restored in any of the following ways:

- Press the **LOCK** button anytime and enter your 4-digit **PIN**.
- Select **Locks Setup** from the **Setup Menu**, then select **YES** to turn **Locks** back on.
- Turn the set-top box off and back on.

Guide Tip A Lock Indicator appears in the **Instant Information** to indicate a program has been locked. To Unlock, press the **LOCK** button on the remote and enter your 4-digit PIN.

Favorites

The **Favorites** feature allows you to quickly access the channels you have designated as your **Favorites**. You can create up to five unique **Favorites** lists, which can be named with the on-screen keyboard.



Set Up Favorites Lists

Select the **Icon** on the **Quick Menu**, or create and manage **Favorites** by selecting **Setup** from the **Main Menu**, then **Favorite Lists Setup**.



Access Favorites Lists

- While watching TV, press the **FAV** button on your remote to skip to the next **FAV** channel on the accessed list.
- From **TV Listings** or **Mini Guide**, press the **FAV** button on your remote to bring up a filtered guide of the channels in your last accessed list. Press **FAV** button again to scroll through all your favorite lists – the guide will have a tab with each list's name.
- From the **Quick Menu**, select the **Icon** to bring up your favorites lists.





Add or Delete Channels to Favorites Lists

- Select **Setup** from the **Main Menu**
- Select **Favorites Lists Setup**
- Select the **Favorites List** to change
- Select the **♥ Icon** to add or remove favorite channels
- To add channels, highlight a channel and press **OK/Select** or **FAV** on your remote. A **♥** indicator will appear next to the listing, designating it as a **Favorite**.
- To Delete channels, select a channel that is already set as a favorite and press the **OK/Select** or **FAV** button to remove the **♥ Icon**, which removes the channel as a favorite.
- Press the **✔ Icon** to confirm favorite channel settings.



Setup

You can activate and customize certain **i-Guide** features such as the **Flip Bar**, **Parental Control** options, **Cable Box** settings, **Audio** settings, **Languages** and more from the **Setup Menu**.

Guide Setup

Use your remote to select **Setup** from the **Main Menu**, then select **Guide Setup**. Use the **◀▶** buttons to select from the following **Setup** options:

Flip Bar Position – The **Flip Bar** can appear either at the top or bottom of your screen.

Flip Bar Timeout – Change the amount of time in which the **Flip Bar** will stay on your screen from 3 to 15 seconds.

Auto-Tune

- **Yes** – Automatically tunes to a channel after 2 seconds when you enter numbers on your remote.
- **No** – Enter 3 digits or press **OK/Select** after entering numbers on the remote.

Reminder Notice – Adjust the amount of time in which the **Reminder Notice** will appear before the start of a program from 1–15 minutes.

Listing Grid Height – Adjust the listings for single or dual-height grid display.

Mini Guide Cell Height – Adjust the display of listings for single (3 channels) or double (2 channels) height.

Message – Select **On** to make the message envelope appear when a new message is received.



Cable Box Setup

Time/Channel Display

- **Off** – Displays the currently tuned channel on the front of the cable box.
- **On** – Displays the current time on the cable box.

AC Outlet

- **Switched** – Determines that power is available only when the cable box is on.
- **Unswitched** – Allows the power to remain constant to the outlet on the back of the cable box.

Configuration – Highlight and press **OK/Select** to show the configuration screen (includes information your cable company may need in the event of a problem with your service).



Audio Setup

Default Audio Track

Secondary digital audio can be changed on certain networks and programs. Note that the default audio track will be set to "Channel Default," or primary audio, which in most cases is English. Use the ◀▶ to change the default language to English, Spanish, French or Portuguese.

Optimal Stereo

- **No** – Volume is unchanged from the current setting.
- **Yes** – Volume is automatically adjusted to the optimal level.

Audio Output

Choose if the audio output goes to your TV or to your stereo.

- **TV Speaker** – is the default setting.
- Select **Advanced** to change the settings for Compression and Stereo Output.



Text Language Setup

You can independently select language settings for menu text by accessing the **Text Language Setup** from the **Setup Menu**. The default setting is English in most cases. You can change the default language to English, Spanish, Canadian English and Canadian French.

- From the **Setup Menu**, select **Text Language Setup**.
- Select English, Spanish, Canadian English or Canadian French to change the language of the on-screen menus within **i-Guide**.
- To confirm, select **Yes**.

Note: Changing the language can take several minutes. During this time, listings are not accessible.



Screen Saver

A **Screen Saver** can be activated if "burn in" on your TV screen is a concern. Once the **Screen Saver** is set to **ON** it will automatically engage if a guide screen is displayed for longer than the set activation time. The default is set to **OFF**.

- From the **Setup Menu** select **Screen Saver**.
- Change the setting to **ON** and select your activation time between 1-15 minutes.



Screen Position Setup


To alter your screen position:

- From the **Setup Menu**, select **Screen Position Setup** to adjust the screen position.
- Use the ▲ ▼ ◀ ▶ buttons on your remote until the display arrows are centered on the screen.

PINs Setup

Setup and change your **Parental Controls PIN** and **Purchase PINs** in **PINs Setup**. Your **Parental Controls PIN** allows you to restrict viewing of programs. Your **Purchase PIN** is used to restrict pay programming purchases.

- Select **Setup** from the **Main Menu**.
- Select **PINs Setup**.
- Follow the on-screen prompts to setup, clear or change your **PINs**.

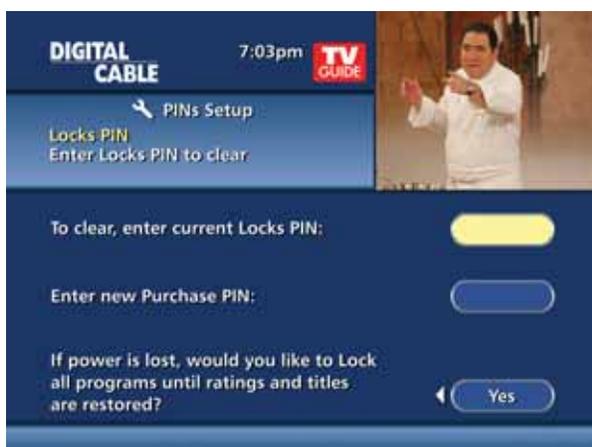


Digital Pay-Per-View (Optional Feature)


i-Guide makes ordering and watching **Pay-Per-View (PPV)** programs easy.

Order Pay-Per-View

From the **Main Menu** and **Quick Menu**, select **PPV** to go to the **PPV Menu**. Then select any of the **PPV** options to see programs available in a variety of categories.

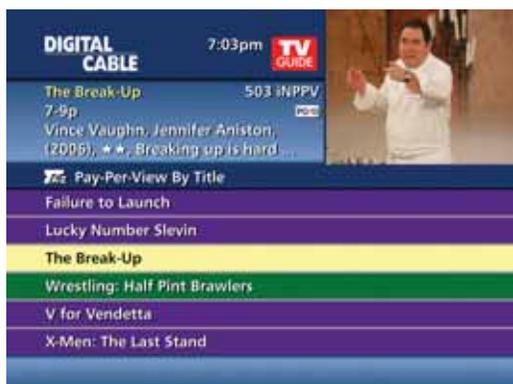

When you find a program of interest, highlight the title and press **OK/Select** for the information screen.

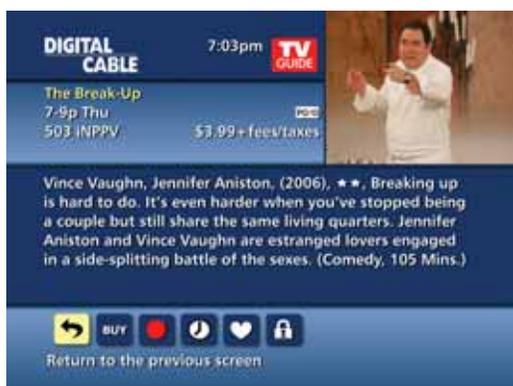

To purchase a program, highlight the **BUY** icon and follow the on-screen prompts to complete your order.

If the program is scheduled to air at a future time, a **Reminder** is automatically set to notify you of your order before the program begins.

Guide Symbols to Know - PPV Information Screens

	Go back to the previous screen		See all the times the program will be airing
	Order the program, or cancel an ordered program		Save this channel in your Favorites list
	Set Recording Timers (Requires separate VCR Setup or use of Digital Video Recorder)		Indicates the program is available as part of a package
	Place a Lock on the program to restrict viewing		Set or cancel a Reminder

Order Pay-Per-View By Phone

If your cable provider offers phone ordering, the order instructions appear on-screen when you select **BUY**. Simply call the number to place your order. Then select **Continue** to complete your order.



Order Pay-Per-View Packages

Your cable service may offer programs in a package by title, time block, etc. Select the title from the listings and a **Icon** will appear if the program is part of a package.



Cancel a Pay-Per-View Order

To cancel a **PPV** order before the program starts:

- Select the ordered program in any of the listings menus (there will be a \$ sign in the **Instant Information**).
- From the information screen, select the **BUY** icon and follow the prompts to cancel the order.



Note: In some cable systems, your order will automatically be canceled if you do not tune to the program. In systems that use phone ordering, you will need to call your cancellation. Please check with your cable provider for the correct **PPV** cancellation procedure.

Pay-Per-View Notices

Notices associated with your **PPV** order appear at various times to alert you to the status of your ordered program.



Pay-Per-View Program Started

A **Program Started** overlay will appear if you try to order a **PPV** program that is in progress but is within the purchase window. You may proceed with the order, but you may miss a portion of the program.

Note: The purchase window is established by your cable provider.

Pay-Per-View Order Conflict

When you order a **PPV** program that airs at the same time as an existing **PPV** order, you will be alerted on-screen with the option to cancel an order or keep both orders.



Pay-Per-View Program Missed

If you have ordered a **PPV** program but didn't tune to it, a **Program Missed** notice will appear asking if you would like to reschedule your order.

Note: This screen will not appear in systems that use phone ordering.

On Demand (Optional Feature)


Watch movies and other programs whenever you want with **On Demand** **ON**. * When you rent an **On Demand** program or package, it is reserved for a specific period of time. You can access and watch the program at your convenience as many times as you want within the rental period. You can even pause, fast forward and rewind using your remote.

Note: Rental period is established by your cable provider.

Access On Demand

You can access **On Demand** programming multiple ways, depending on your cable provider's service.

- From your remote
- From the **Quick Menu**
- From the **Main Menu**
- From **Kids, Movies, Search** and **Sports** sub-menus
- From an **On Demand** channel in the TV Listings
- From an **On Demand** Tab on the **Flip Bar**

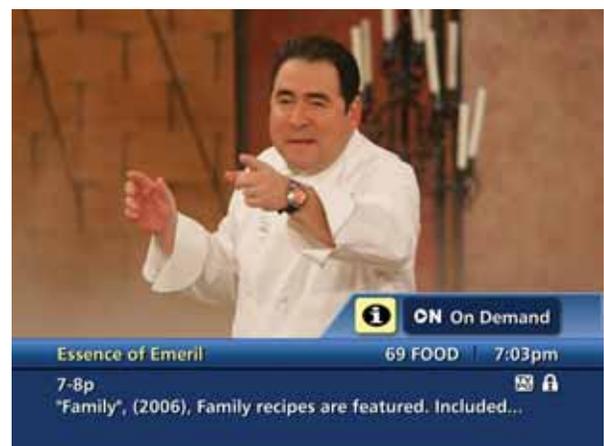

* **On Demand** not available in all areas. **On Demand** programs may not be recorded with **DVR** (if available).



Order On Demand Programs


The **On Demand Menu** displays a variety of programming categories. Use the **▲▼◀▶** buttons on your remote to select a category and press **OK/Select** to access listings for the category or press access sub-category menus.*

Select a title by pressing **OK/Select** or **INFO** to access detailed information, including program length, cost, rating and description.

Order From the On Demand Preview Banner

Use the **BUY** icon from the **On Demand** preview banner to easily purchase while watching the preview.

- Select the **BUY** icon and press **OK/Select** to order the **On Demand** program.
- Select the **👁** icon and press **OK/Select** to return to the **On Demand** information screen.

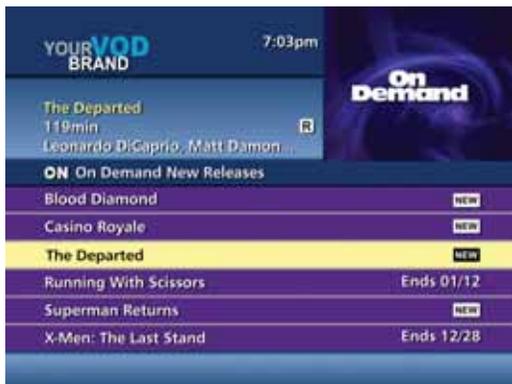

To buy the program, highlight the **BUY** icon, and follow the on-screen prompts to complete your order. If the program is available at no cost**, the **BUY** icon will appear instead of **👁** icon. Your selection will begin playing immediately and you can watch as often as you want during the rental period.



Expiring Programs Display

On Demand programs with a specified expiration date are displayed with an expiration date in the list, e.g., **Ends 8/12**. Programs without a specific end date will be denoted as **LC** or **Last Chance**.



* Menu label and categories vary by cable provider.


** If available from your cable provider.

Guide Symbols to Know – On Demand Action Icons

	Go back to the previous screen		Resume play of the video
	Order the program, or cancel an ordered program		Restart the video from the beginning
	Tune to a program (for free and subscription programming)		Delete the title from your rented titles list
	Preview		Indicates the program is available as part of a package
	Place a Lock on the program to restrict viewing		Cancel selection

Watch On Demand Programs

Use your remote to pause, fast forward, rewind and stop the program.

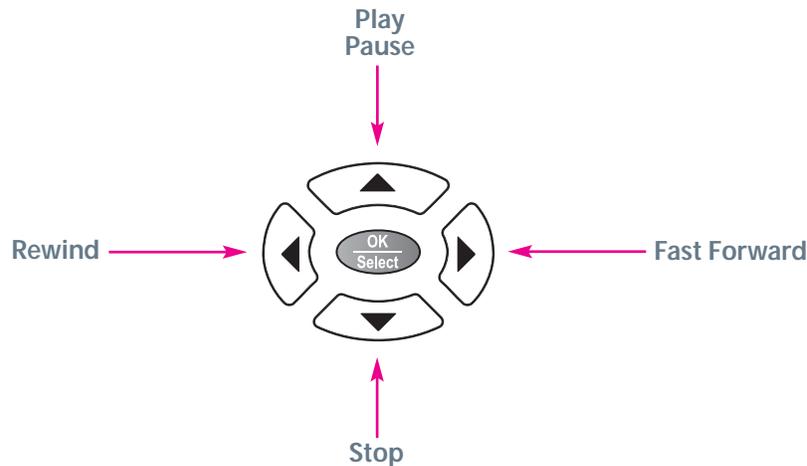

Guide Tip

You may also be able to use the VCR control buttons available on some digital cable remotes. Remote control features vary.




Status Bar

The **On Demand** Status Bar displays when the user presses **Play, Pause, Rewind, Fast Forward** or **Stop**. **Fast Forward** and **Rewind** run at one speed, and the **Status Bar** shows where you are in the show that is playing.

If you have stopped a program and want to come back to it later, select **My Rentals*** from the **On Demand Menu**.

- Highlight and select a title to see the information screen that displays your remaining rental time and other program details.
- Select **▶** to start watching where you left off or select **⏮** to start the program from the beginning.
- Watch as many times as you want within the rental period.

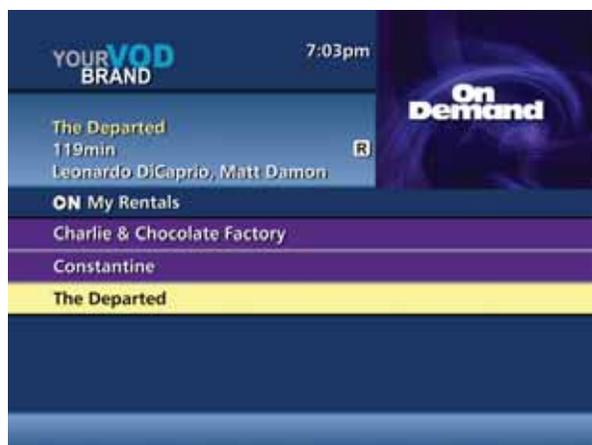


Guide Tip You can also find rented titles in other **On Demand** listing screens. A checkmark **☑** appears in the **Instant Information** to identify it as a rented program.

On Demand Packages

Some programs may be available as part of a package. If a program is available in a package, or available with a subscription service, a notice will appear on your screen. You can select the **BUY** icon to continue with the purchase, the **📦** icon to learn more about the package, or the **🚫** icon to cancel.

Note: **On Demand** programs that are free or part of a subscription may not appear on the **My Rentals** list. These programs can be accessed at any time from the **On Demand** listings.

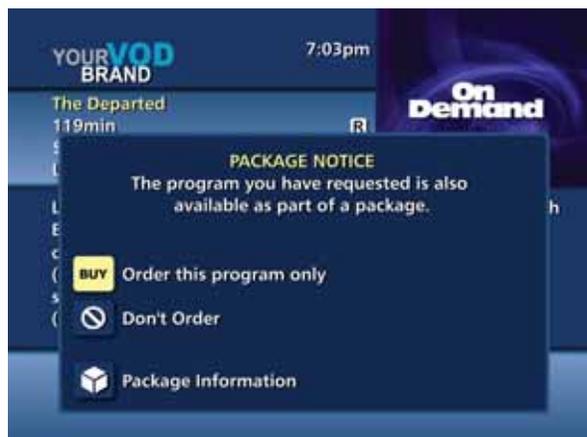

Guide Tip If a **Reminder** appears during an **On Demand** program you are watching, you can accept the **Reminder** and tune to the linear program, which stops the **On Demand** program. To return to your **On Demand** program later, access it from your list of rented titles and Resume or Restart from the beginning.



* Menu label varies by cable system.

HDTV (Optional Feature)

High Definition (HD or HDTV) is the most dramatic change for viewers since the introduction of color TV! **HD** is the highest resolution digital television format available, offering up to 5 times the resolution of standard analog television. **HD** delivers theater-quality pictures and Dolby Digital™ surround sound. Watch your favorite shows, movies, sports and events with a wider screen, life-like picture and crystal clear sound.

To quickly access **HD** programming, press the **Quick Menu** button and select the **HD**  **Icon**. From there, you can select **HD** programming By Time, By Channel or view a list of all **HDTV** services. You also can search for **HDTV** programs from the **Search Menu**.

Note: You must have **HD** equipment to view **HD** programming.

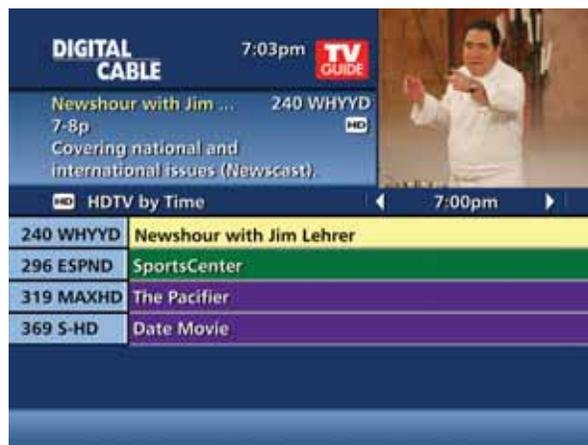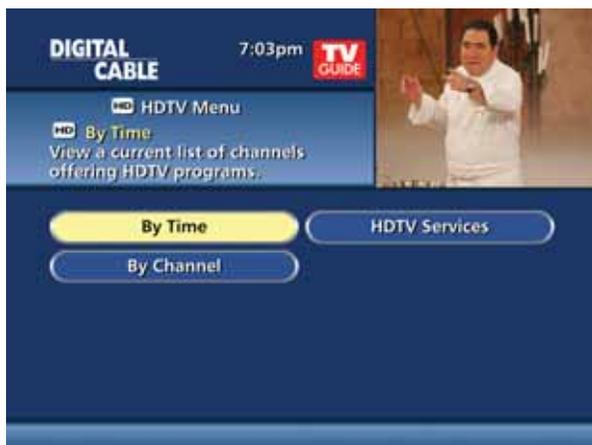

Digital Video Recording (DVR) – Dual Tuner (Optional Feature)

Imagine...coming home to your own personal library of television programs, movies and sports that you can watch whenever it's convenient for you. It's TV on your schedule.

Pause live television! Rewind and replay programs so you don't miss a beat.

Record up to 90 hours* of your favorite programs and view them as many times as you want, whenever you want. You can even record **High Definition TV****. All without rentals, tapes or returns.

Your Dual Tuner **DVR** has made recording and watching your favorite programs easier than ever. Powered by **i-Guide**, now you can watch a program while recording another or record two programs at once! You have your own personal video library, stored on your digital set-top box, so you can watch them at your convenience. You can even **PAUSE, FAST FORWARD** and **REWIND** live TV to playback scenes you've missed.

Control Live TV

Using your **DVR** and your Digital Cable Remote, you can control live TV. Anytime you tune to a channel, the **DVR** begins making a temporary recording of whatever you're watching. So you can **PAUSE** if the phone rings, **REWIND** or **INSTANT REPLAY** a scene you missed and **FAST FORWARD** to skip what you don't want to watch. Your **DVR** will record up to two hours of live TV**.

The live TV recording is not a permanent recording, unless you actually save it to the **DVR's** hard drive. For live TV recordings, the temporary recording (buffer) will be erased if any of the following occur:

- Turn off your **DVR**.
- Watch the same channel for longer than the temporary recording (buffer) period. The most recent two hours of the program (less for **HD**) is kept in the temporary recording.
- Switch to another program on the same tuner. When you change channels without using the **SWAP** function, your **DVR** begins to store the new program. It removes the previous program you were watching from the storage. (See **SWAP** section for additional information.)
- You watch more than two hours. After two hours, the **DVR** removes the earlier minutes of the recording, so that only the most recent two hours are kept in the temporary storage.

Playback Controls

You can play back your video recordings using the Video Control Buttons.



These buttons function like VCR controls. Plus, you have new **DVR** control features, like **Instant Replay** and **SWAP**.


Note: Some remotes are equipped with an **Instant Replay, SWAP** and **LIVE** buttons.

*Recording capacity varies.

**Recording buffer (temporary storage) for each tuner will record as long as you stay tuned to the same channel.

Remote Control Arrow Buttons

The **▶◀▶▶** buttons on your remote control will control playback when you are watching a recording in progress or while watching a recorded program.

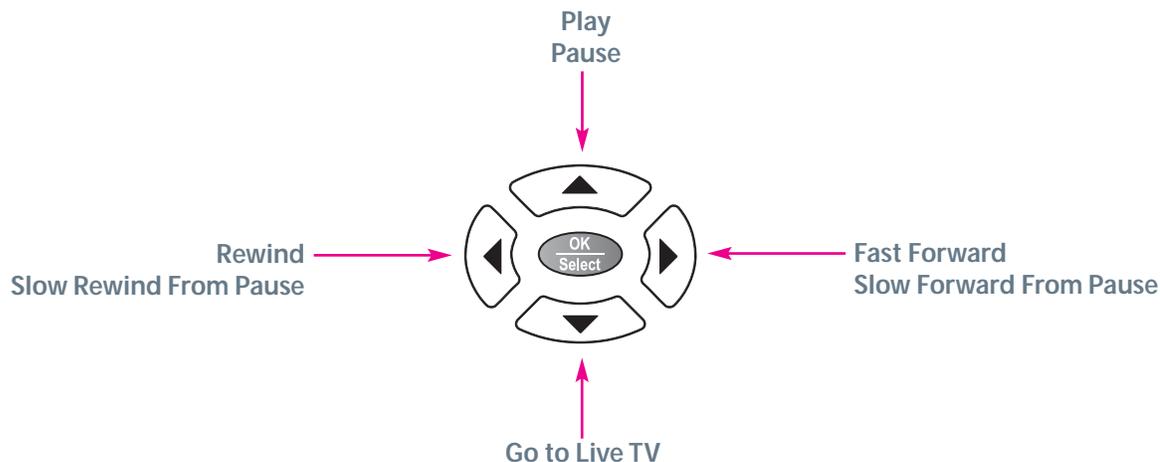

Status Bar

The **Status Bar** appears whenever you **PAUSE**, **REWIND** or **FAST FORWARD** a live program. It also gives you information such as the title of the program you are watching, the source of the program and duration of time. The yellow position bar indicates where you are in the program. Green indicates the length of the program you are watching. White indicates the length of other programs available in the buffer. Red indicates that you are watching a recording in progress.

Pause

As you watch live TV and recorded programs, press **PAUSE** **⏸** and the programming on your TV screen instantly freezes. No more missing the climactic scene of a movie or the winning play of the game! For programs you are watching live, your **DVR** will remain in pause for up to 90 minutes*. Pressing **PAUSE** **⏸** more than once allows frame by frame viewing. Press **PLAY** **▶** to resume normal play of the program from the point where it was paused.



* Pause capacity depends on video format; less than two hours for **High Definition** programming.

Rewind

Want to review a portion of your live show? It's a snap with **DVR**. Press **REWIND** ⏮. Press it again up to 4 times to increase the rewind speed. REW, REW2, REW3 and REW4 will appear on-screen. REW is the slowest setting and REW4 is the fastest. Press **REWIND** a fifth time or press **PLAY** ⏪ to resume normal play.



Fast Forward

For programs you are watching live, **FAST FORWARD** can be activated if you have paused or rewound the program. Press **FAST FORWARD** ⏭ to move forward in the program. Press it up to 4 times to increase the fast forward speed. FF, FF2, FF3 and FF4 will appear on-screen. FF is the slowest setting and FF4 is the fastest. Press **FAST FORWARD** a fifth time or press **PLAY** ⏪ to resume normal play.

Note: You can only fast forward up to the point of live broadcast.



Slow Motion

Your **DVR** is equipped with slow-forward and slow-rewind functions to give you crisp and clear **Slow Motion** images. Ever wonder what the referees are looking at when they review a controversial play? Use **Slow Motion** to get an inside look. To activate slow-forward, press **PAUSE**  and then **FAST FORWARD** . To use slow-rewind, press **PAUSE**  and then **REWIND** . To return to regular speed, press **PLAY**.



Instant Replay

With **Instant Replay**^{*}, you can go back to see the last play of the game or replay the last scene of your movie. Just press the  button on your remote or **PAGE**  on your remote to replay the last 15 seconds. Press the  button on your remote or **PAGE**  repeatedly to continue skipping back in 15-second increments.

Return to Live TV

Anytime you pause or rewind a live program, the show continues to be broadcast in real time. To return to live programming, press the  button*.

SWAP Between Two Programs

Because your **DVR** has two tuners, it can buffer (temporarily record) two programs at the same time – one on each tuner. The **SWAP** feature lets you toggle back and forth between the two live shows while giving you full control of both.

- While you are tuned to a program, press the **SWAP** button on your remote. You will change tuners.
- Now you can select an alternate program by changing channels or using the guide.
- Press **SWAP** again to toggle between the two programs.
- When recording two programs at the same time, on-screen prompts will ask if you wish to swap tuners. Select your desired recording preference.

Note: The **SWAP** button is the key to keeping the buffer for both programs. If you change channels without using **SWAP**, you will lose the buffer.

* Some remotes are equipped with **Instant Replay** and **LIVE** buttons.

Personal Video Library

Using your **DVR with i-Guide**, you can build your own personal library of programs, movies, sports, TV shows...whatever you want. Follow the steps below to build and manage your personal video library.

Guide Tip **Using Parental Locks With DVR** - You can restrict viewing of recorded programs, just like any other program. If you schedule a recording for a program you have **Locked**, the program will be recorded, however, audio is muted and no video will appear while the program is recording. A restricted notice remains on-screen allowing you to enter your **PIN** to view the program during recording. Once the program has been recorded, you can access it from your list of recorded programs. Just enter your **PIN** to view it.

Building Your Library - Recording Programs

When recording two programs at the same time, on-screen prompts will ask if you wish to swap tuners. Select your desired recording preference.

You can set and schedule recordings three ways with **i-Guide**: one-touch record, record from a program info screen and by manually scheduling your recording.




One-Touch Record

Press **RECORD**  on your remote any time while watching TV or while navigating through the guide. For programs airing now, recording begins immediately at the point you pressed **RECORD**.  You can automatically schedule recordings for programs starting at a later time or date by pressing **RECORD**  while in the listings. Recording will start at the program's scheduled start time.

Record From Program Information

From the listings, highlight a program starting now or scheduled for a later time. Press the **INFO** button and you will see an information screen. Highlight the  icon and press **OK** to start recording at the time the program is scheduled to start.

Note: For more information on **Action Icons**, see the **Action Icons** section in this manual.

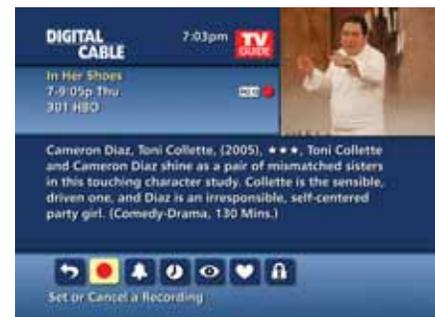

Manually Schedule a Recording

You can set a **Manual Recording** to automatically record a specific time and channel.

- Select **DVR** or **My DVR** Button* from the **Main Menu**, then select **Set a Recording**.
- Select the start and end times and the day you wish to record and confirm your settings.
- A channel list will then appear, allowing you to select the channel to record.
- A "Create a New Recording" screen will appear. Select **Create a Recording** to confirm your settings or select the **Recording Options**  icon for additional recording options.

*My **DVR** button not available on all remotes. You can access the **DVR Sub-Menu** through the **DVR** button on **Quick Menu**.

Record Two Programs at Once

The Dual Tuner **DVR** allows you to set recordings for two different programs that air at the same time. While recording two programs, you can watch and control either program up to the point of live TV by using the **SWAP** button on your remote. There are several ways to record two programs at once. Here are two basic examples:

While Watching a Show

- Press **RECORD** to record the program you are watching.
- Press **SWAP** to switch to the other tuner and find the second program you want to record.
- Press **RECORD** when you locate the second program you want to record.

From the Guide

- Highlight a program you want to record from any listings screen.
- Press **RECORD** to set up the first recording.
- Highlight the second program.
- Press **RECORD** to set up the second recording.
- When recording two programs at the same time, on-screen prompts will ask if you wish to swap tuners. Select your desired recording preference.



Record a Series

Your **DVR** lets you record multiple episodes of a program according to your preferences.

- Select the episode type to record, such as first-run only or all episodes.
- Specify how many recordings to save.
- Specify how long to save the recording – until you erase it or until space is needed.
- To access advanced series setup features like add minutes to the start and end times and specify which channels to record, select the **Recording Options**  icon to review all options.

Your **Series Recordings** will appear in the **My Recordings** list with the show title as its label. Multiple recordings of the same show will have the same label and will be listed beginning with the most recent recordings first as default. To change your view, use the **◀ ▶** on your remote to View by Date, View by Channel or View by Title.

You may also modify the priority assigned to a series using the **Series Priority List**. (See next section)



Modify the Series Priority List

To help you manage which series get recorded when there are scheduling conflicts, your **DVR** automatically creates a **Series Priority List**. The first series you set to record has the highest priority and is the program recorded in case of a conflict. If there are no conflicts, each additional series you set to record is added to the bottom of the list. You can easily change the recording priority of the programs so that the programs of your choice are recorded in case of a conflict.


- Select **DVR** from the **Main Menu** or **Quick Menu**.
- Choose **Series Priority List**.
- Highlight a program and use the **Page ▲ ▼** buttons on your remote to modify its priorities.

From here you can change your **Series Recording Options** by pressing **INFO** and selecting the **Options**  icon.

Note: If you want to record two series recordings instead of an individual recording that airs at the same time, you must delete the individual recording from the **Scheduled Recordings List** (See Cancel a Scheduled Recording section).

Manage Schedule Conflicts

If you schedule more than two recordings for the same time, you will see a **Scheduling Conflict** screen that allows you to choose between a previously set recording and the new recording that is conflicting. Individual recordings always take priority over series recordings when there are scheduling conflicts. In case of a scheduling conflict between two series programs, additional icons will appear at the bottom of the **Scheduling Conflict** screen to help you determine which program to record.

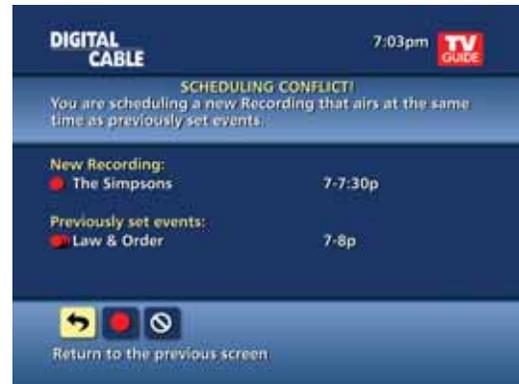

Manage Series Priority List

- Return to the previous screen.
- Record new program or series as shown.
- Show conflicts when the new series is a high priority.
- Show conflicts when the new series is a low priority.
- Don't record new program or series.

- To give your new recording the highest scheduling priority and to capture the most number of episodes for your new recording, select **High**. The screen will show you how many episodes of the new series will be recorded and which episodes of the old series will not be recorded because of the conflict.
- To move the new series back to the bottom of the scheduling priority list, select **Low** and the screen will refresh and give you revised results.
- Select the **Record** icon to confirm your new settings.



View List of Scheduled Recordings

- From the **Main Menu** or **Quick Menu**, select **DVR***.
- Select **Future Recordings**.
- See a list of all the programs you have scheduled to record.
- Select a title to cancel the **Scheduled Recording** or modify **Recording Options**.



* Menu label may vary.

Modify Recording Options

i-Guide gives you flexibility to manage your personal video library. You can change your **Recording Options** at any time, as often as you like.

Change Options for Scheduled Recordings

From the Main Menu or Quick Menu

Select **DVR**, then select **Future Recordings** to see a list of your **Scheduled Recordings**. Highlight a program title and press **OK/Select** or **INFO**.



Select the  **Icon** from the Program Information Screen. Select the  **Icon** to change the **Recording Options** or select the  **Icon** to delete this program from your list of **Future Recordings**.

Use the     buttons on your remote to change **Recording Options**:

- Change the frequency of the recording, such as every day or once a week.
- Specify how many recordings to save.
- Set a Save Until parameter, either until you delete or delete automatically when space is needed.
- Change the start and end times in order to catch every minute of a program, even if it runs over.



From Listings

Select your **Scheduled Recording** in the listings; it will be indicated by the red dot in the **Instant Info**.

Press **OK/Select** or **INFO** and select the  **Icon** to change your options or delete the **Scheduled Recording**.

From here, select  **Icon** to cancel the recording, or select  **Icon** to see all the **Recording Options**.



Recording Notices


Recording Starting Notice

Before a Scheduled Recording begins, a notice will appear on-screen giving you the opportunity to confirm or cancel the Scheduled Recording. If you don't do anything when the recording is scheduled to start, the **DVR** will automatically tune to the channel and begin recording. Live TV programming that has been temporarily recorded will be erased once the Scheduled Recording starts.



Recording Stopped Notice

Changing the channel during a recording will stop the recording. You will see a notice confirming whether you want to stop the recording and change channels or continue recording. You can **SWAP** to watch live TV while continuing a current recording. (See **SWAP** section of this manual for more information.)

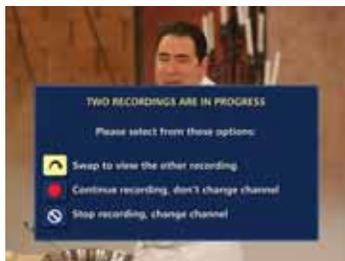

Swap Icon on Stop Recording Notice

The **SWAP**  icon will appear on the **Stop Recording Notice** screen if you attempt to change the channel while a recording is in progress.

- Select the  icon and press **OK/Select** to **SWAP** to view another channel on the other tuner.
- Select the  icon and press **OK/Select** to stop the recording and change the channel.

View Programs Stored in Your Personal Video Library

From the **DVR Menu**, select **My Recordings**. Use the **▲▼** buttons on your remote to search through and highlight titles from your list of recorded programs. Press **OK/Select** or **INFO** to select the program.

- From the information screen, select  icon to resume play from where you left off or select  icon to restart from the beginning.
- To control playback while watching a recorded program, use either the Video Control Buttons or the arrow buttons on your remote. (See the "Playback Control" section of this manual for more information.)



Guide Symbols to Know – Recorded Program Information Screens

	Go back to the previous screen		Delete the program from My Recordings
	Play the recording		Change the Delete Priority*
	Start the recording from the beginning		Place a Lock on the program to restrict viewing

Guide Tip **DVR** is not a long-term storage device. To maximize your storage space, review the contents of your library regularly and discard the recordings you no longer wish to save. See "Managing Your Personal Video Library" in this manual.


***Delete Priority** is used to determine whether you delete the program or the program is deleted automatically when space is needed.

Manage Your Personal Video Library

A recorded program remains in your personal video library until you decide to delete it unless you have it set to delete when space is needed. Your **DVR** will record and store up to 90 hours of standard definition programming and up to 20 hours of **High Definition** programming*. There are several options for making the most efficient use of **DVR** storage space:

To Delete Recordings

From a Recorded Program Information screen, select the **X** Icon to delete the recording. Select the **I** Icon to modify the **Delete Priority**, which gives you additional options such as deleting the recording when space is needed.

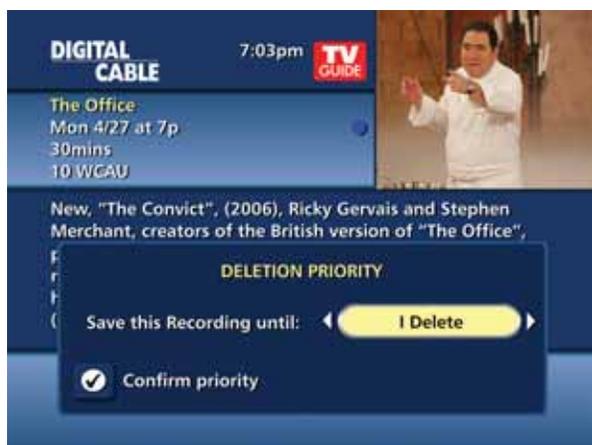

Copy Recordings to a VCR or DVD

After you watch a recording, decide to either erase it or keep it permanently by transferring it to a VCR or DVD.

When you copy recordings to a VCR or DVD, make sure that the recording is displayed on the TV screen for the entire time the recording is being copied. If you change channels or display guide screens during the copying process, your tape copy will contain these images and you may not have a complete copy of the recording.

1. Connect the **RCA Jacks** connection on the back of the **DVR** to your VCR or DVD Video In.
2. Put a tape in your VCR or DVD in your DVD recorder.
3. Access your list of **Recorded Programs**.
4. Highlight a program from your list and press **OK/Select** or **INFO** to select the recorded program you want transferred.
5. From the Information Screen, select **K** to restart from the beginning.
6. Start recording on the VCR or DVD when playback begins.
7. As the recording plays, it is copied to your VCR or DVD.

Note: Refer to your VCR or DVD User Manual for specific instructions.



Recording Low and Full Notices

To help you manage your personal video library, **i-Guide** will advise you with an on-screen notice when the available memory gets low or full.

If recording space becomes full during a recording, the recording will stop. Make sure you have enough recording space to record the entire program before you begin to avoid missing part of the program.

* Recording **HD** programming requires a **DVR** connection to a **HD** television.

Digital Video Recording (DVR) – Single Tuner (Optional Feature)

Imagine...coming home to your own personal library of television programs, movies and sports that you can watch whenever it's convenient for you. It's TV for your schedule.

Pause live television! Rewind and replay programs so you don't miss a beat.

Record up to 40 hours* of your favorite programs and view them as many times as you want, whenever you want. You can even record **High Definition TV****. All without rentals, tapes or returns.

DVR has made recording and watching your favorite programs easier than ever. Powered by **i-Guide**, now you can record your favorite programs and watch them at your convenience. You have your own personal video library, stored on your digital set-top box. You can even pause, fast forward and rewind Live TV to playback the scenes you've missed. In fact, your **DVR** is one of the first available that can actually record and play **High Definition** programming!***

Control Live TV

Using your **DVR** with **i-Guide**, you can control Live TV. Anytime you tune to a channel, the **DVR** begins making a temporary recording of whatever you're watching. So you can **PAUSE** if the phone rings, **REWIND** the scene you missed and **FAST FORWARD** to skip what you don't want to watch. Your **DVR** will record up to one hour of live TV[†].

The live TV recording is not a permanent recording, unless you actually record it to the **DVR's** hard drive. For Live TV recordings, the temporary recording (buffer) will be erased if any of the following occur:

- You turn off the **DVR**.
- You change the channel.
- You begin recording the program you are watching or another program to the **DVR**.
- You watch more than one hour. After one hour, the **DVR** removes the earlier minutes of the recording, so that the most recent hour is kept in the temporary storage.

Playback Controls

You can play back your video recordings using the Video Control Buttons.



These buttons function like VCR controls. Plus, you have new **DVR** control features, like **Instant Replay**.

Note: Some remotes are equipped with an **Instant Replay** and **Live** buttons.


*Recording capacity varies.

Recording and playback of **High Definition programs requires **DVR** connection to **High Definition** television.

†Recording buffer (temporary storage) will record as long as you stay tuned to the same channel.

Remote Control Arrow Buttons

The **▲▼◀▶** buttons on your remote control will control playback when you are watching a recording in progress or while watching a recorded program.

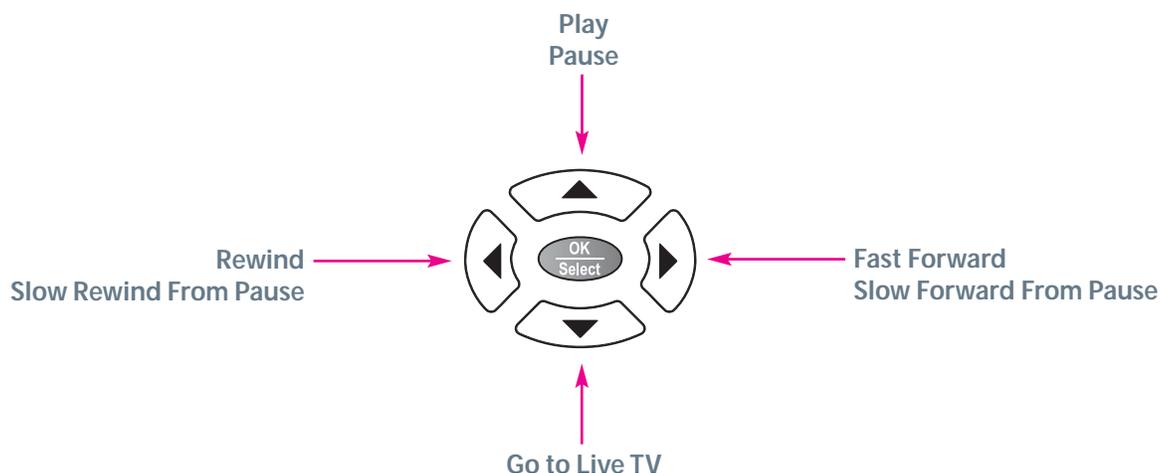

Pause

As you watch live TV and recorded programs, press **PAUSE** **⏸** and the programming on your TV screen instantly freezes. No more missing the climactic scene of a movie or the winning play of the game! For programs you are watching live, your **DVR** will remain in pause for up to two hours*. Press **PLAY** **▶** to resume normal play of the program from the point where it was paused.



Rewind

Want to review a portion of your live show? It's a snap with **DVR**. Press **REWIND** **◀**. Press it again up to 4 times to increase the rewind speed. REW, REW2, REW3 and REW4 will appear on-screen. REW is the slowest setting and REW4 is the fastest. Press **REWIND** a fifth time or press **PLAY** **▶** to resume normal play.



Fast Forward

For programs you are watching live, **FAST FORWARD** can be activated if you have paused or rewound the program. Press **FAST FORWARD** **▶▶** to move forward in the program. Press it up to 4 times to increase the fast forward speed. FF, FF2, FF3 and FF4 will appear on-screen. FF is the slowest setting and FF4 is the fastest. Press **FAST FORWARD** a fifth time or press **PLAY** **▶** to resume normal play.



Note: You can only fast forward up to the point of live broadcast.

* Pause capacity depends on video format; less than 15 minutes for **High Definition** programming.



Slow Motion

Your **DVR** is equipped with slow-forward and slow-rewind functions to give you crisp and clear **Slow Motion** images. Ever wonder what the referees are looking at when they review a controversial play? Use **Slow Motion** to get an inside look. To activate slow-forward, press **PAUSE** (⏸) and then **FAST FORWARD** (⏩). To use slow-rewind, press **PAUSE** (⏸) and then **REWIND** (⏮). To return to regular speed, press **PLAY**.

Instant Replay

With **Instant Replay***, you can go back to see the last play of the game or replay the last scene of your movie. Just press **PAGE** (⏪) on your remote to replay the last 15 seconds. Press **PAGE** (⏪) repeatedly to continue skipping back in 15-second increments.

Return to Live TV

Anytime you pause or rewind a live program, the show continues to be broadcast in real time. To return to live programming, press the (⏪) button*.

Personal Video Library

Using your **DVR** with **i-Guide**, you can build your own personal library of programs, movies, sports, TV shows ... whatever you want. Follow the steps below to build and manage your personal video library.

Building a Library - Recording Programs

You can set and schedule recordings three ways with **i-Guide**: one-touch record, interactively by program and by manually scheduling your recording.

One-Touch Record

Press **RECORD** (Ⓜ) on your remote any time while watching TV or while navigating through the guide. Recording begins immediately at the point you pressed **RECORD** (Ⓜ) for programs airing now. You can automatically schedule recordings for programs starting at a later time or date by pressing **RECORD** (Ⓜ) while in the listings. Recording will start at the program's scheduled start time.



Guide Tip

Using Parental Locks With DVR - You can restrict viewing of recorded programs, just like any other program. If you schedule a recording for a program you have **LOCKED**, the program will be recorded, however, audio is muted and no video will appear while the program is recording. A restricted notice will remain on-screen allowing you to enter your **PIN** to view the program during recording. Once the program has been recorded, you can access it from your list of recorded programs. Just enter your **PIN** to view it.

*Some remotes are equipped with **Instant Replay** and **LIVE** buttons.

Record From Program Information

From the listings, highlight a program scheduled for a later time. Press the **INFO** button and you will see an information screen. Highlight the  **Icon** and press **OK/Select** to start a recording for the time the program is scheduled to start.


Note: For more information on **Action Icons**, see the **Action Icons** section in this manual.



Manually Schedule a Recording

- From the **Main Menu** or **Quick Menu**, select **DVR***.
- Select **Set a Recording**.
- Enter the start and end time for the recording, enter the day to record and select  **Icon** to confirm.
- Select the channel you want to record and you're set to go.

To schedule a repeat recording, such as multiple episodes of a program, you can modify the recording options. See **Modify Recording Options** section.

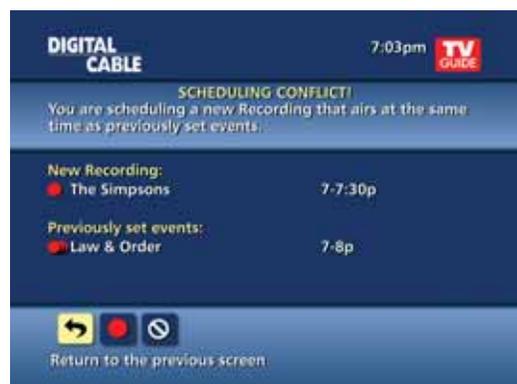

Manage Scheduling Conflicts

If you try to schedule a recording that overlaps another scheduled recording time, you will see a **Scheduling Conflict** message. Use the icons to decide which program to record.

-  To keep the new recording and cancel the old one.
-  To keep the old recording and cancel the new one.



View List of Scheduled Recordings

Step 1: From the **Main Menu** or **Quick Menu**, select **DVR***.

* Menu label may vary



Step 2: Select **Future Recordings**.



Step 3: See a list of all the programs you have scheduled to record, select a title to cancel the scheduled recording or modify recording options.




Modify Recording Options

i-Guide gives you flexibility to manage your personal video library. You can change your **Recording Options** at any time, as often as you like.

Change Options for Scheduled Recordings

From the Main Menu

Select **DVR**, then select **Future Recordings** to see a list of your scheduled recordings. Highlight a program title and press **OK/Select** or **INFO**.

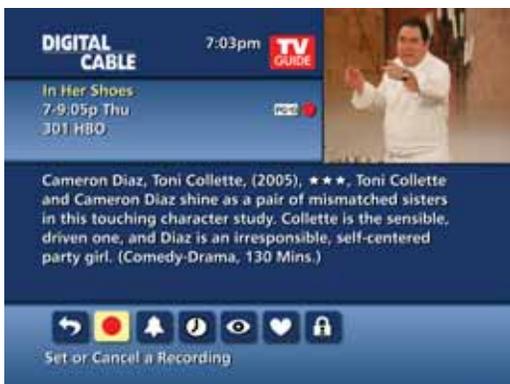

Select the **Red Dot Icon** from the program information screen. Select **Blue Square with White Dot** to change the **Recording Options**, or select **Blue Square with White X** to delete this program from your list of **Future Recordings**.




Recording Options:

- Change the frequency of the recording, such as every day or once a week.
- Specify how many recordings to save.
- Set a Save Until parameter, either until you delete or automatically when space is needed.
- Change the start and end times in order to catch every minute of a program, even if it runs over.



From Listings

Select your **Scheduled Recording** in the listings indicated by the red dot in the instant info.

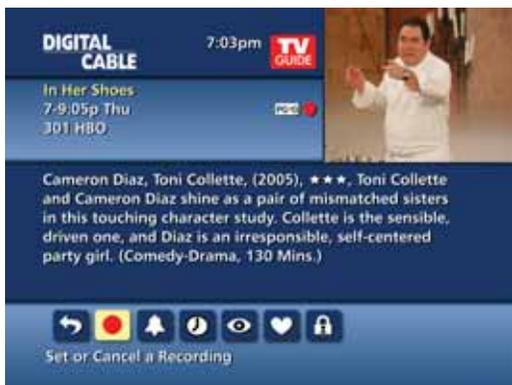

Press **OK** or **INFO** and select the  icon.



From here, select  Icon to cancel the recording, or select  Icon to modify the **Recording Options**.

Note: A scheduled recording will begin at the indicated start time and channel you select. The **Scheduled Recording** is not tied to a program title. The **DVR** will record whatever program airs on that channel at that time.

Recording Notices

Recording Starting Notice

Before a scheduled recording begins, a notice will appear on-screen giving you the opportunity to confirm or cancel the scheduled recording. If you don't do anything when the recording is scheduled to start, the **DVR** will automatically tune to the channel and begin recording. Live TV programming that has been temporarily recorded will be erased once the scheduled recording starts.

Recording Stopped Notice


Changing the channel during a recording will stop the recording. You will see a notice confirming whether you want to stop the recording and change channels or continue recording.



View Programs Stored in Your Personal Video Library

From the **DVR Menu**, select **My Recordings**. Use the ▲▼ buttons on your remote to search through and highlight titles from your list of recorded programs. Press **OK/Select** to select the program.

From the Information Screen, select **⏮ Icon** to resume play from where you left off or select **▶ Icon** to restart from the beginning.

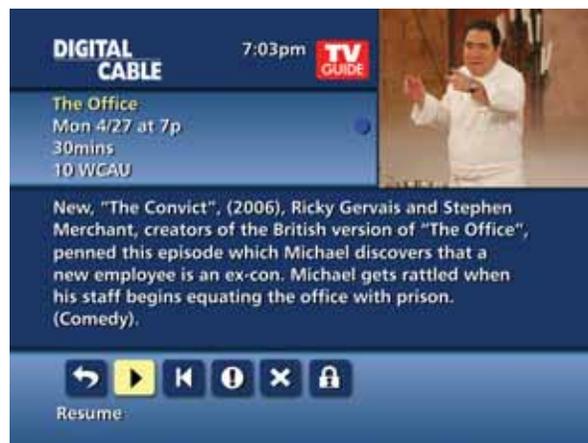

Guide Tip **DVR** is not a long-term storage device. To maximize your storage space, review the contents of your library regularly and discard the recordings you no longer wish to save. See "Managing Your Personal Video Library" in this manual.

Guide Symbols to Know – Recorded Program Information Screens

	Go back to the previous screen		Delete the program from My Recordings
	Play the recording		Change the Delete Priority Rule
	Start the recording from the beginning		Place a Lock on the program to restrict viewing

Guide Tip To control playback while watching a recorded program, use either the video control buttons or the arrow buttons on your remote. See the "Playback Control" section for more information.


- Deletion Rule is used to determine whether you delete the program or the program is deleted automatically when space is needed.

Manage Your Personal Video Library

A recorded program remains in your personal video library until you decide to delete it, unless you have it set to delete when space is needed. Your **DVR** will record and store up to 40 hours of standard definition programming and up to 10 hours of **High Definition** programming*. To make the most efficient use of **DVR** storage space, follow these guidelines:

To Delete Recordings

From a recorded program Information Screen, select the **X** Icon to delete the recording. Select the **I** Icon to modify the **Delete Priority**, which gives you additional options such as deleting the recording when space is needed.

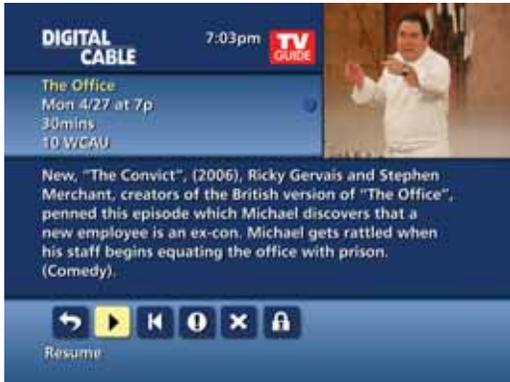

Copy Recordings to a VCR or DVD

After you watch a recording, decide to either erase it or keep it permanently by transferring it to a VCR or DVD.

When you copy recordings to a VCR or DVD make sure that the recording is displayed on the TV screen for the entire time the recording is being copied. If you change channels or display guide screens during the copying process, your tape copy will contain these images and you will not have a complete copy of the recording.

1. Connect the **RCA Jacks** connection on the back of the **DVR** to your VCR or DVD Video In.
2. Put a tape in your VCR or DVD in your DVD recorder.
3. Access your list of **Recorded Programs**.
4. Highlight a program from your list and press **OK/Select** or **INFO** to select the recorded program you want transferred.
5. From the Information Screen, select **K** to restart from the beginning.
6. Start recording on the VCR or DVD when playback begins.
7. As the recording plays, it is copied to your VCR or DVD.

Note: Refer to your VCR or DVD User Manual for specific instructions.



Recording Low and Full Notices

To help you manage your personal video library, **i-Guide** will advise you with an on-screen notice when the available memory gets low or full.

If recording space becomes full during a recording, the recording will stop. Make sure you have enough recording space to record the entire program before you begin to avoid missing part of the program.

* Recording **HD** programming requires a **DVR** connection to a HD television.

Frequently Asked Questions

Interactive Program Guide

Q. What are the icons (little pictures) at the bottom of the screen?

A. **Quick Menu Icons** are available to help you find what you're looking for faster. The **Quick Menu** lets you quickly go to other areas of the guide, such as **Movies** or **Favorites Menus**. Once you have selected a program title by highlighting it and pressing **OK/Select** or **INFO**, you can use the **Action Icons** on the information screens to set **Reminders** and **Parental Controls**, schedule **Recordings**, **BUY** programs and more.

Q. How do I tell what the icons mean?

A. You will find descriptive text beneath the row of icons when you have an icon highlighted. This information changes as you move the yellow highlight using the arrow buttons on your remote. On Program Information screens, the **Action Icons** are specific to the program. For example, a **BUY Icon** will appear only for **On Demand** and **Pay-Per-View** programs. **Playback Icons** will appear only for recorded programs or rented **On Demand** titles.

Q. I can't see the entire program title in the listings.

A. Some program titles are too long to fit in the space provided in the grid. You might see "... " to indicate there is more to the title. (For example: "Third Rock From the Sun" might look like "Third Rock..."). Highlight the program and check the **Instant Information** area at the top of the screen for program title and other valuable information, including rating, actors, start/end times, etc.

Q. What is the graphic bar that appears when I change channels?

A. The **Flip Bar** appears for a few seconds as you're changing channels to provide important information about programs. You will find the name of the current program, start and end times, channel number, rating and current time.

Q. How do I get information on programs?

A. **i-Guide** provides detailed information on programs, including movies and sporting events. While in a listings screen, you can access information by pressing the **INFO** button on your remote. While you are tuned to a program, press **INFO** once for **Instant Information** or twice for complete information. Information includes program details like actors, ratings and a brief program synopsis. You can also set **Reminders**, place **Parental Locks**, order **Pay-Per-View** movies and events and see other times a program is airing. To remove the information screen and return to watching television, press the **EXIT** button on the remote.

Q. What is the red light on the upper left front of my box and/or what is the envelope on the screen?

A. Occasionally your cable provider may send a **Message** to let you know of new services and special promotions. To read the message, go to the **Main Menu** and select **Messages**. You can keep or delete the **Message** once you have opened it.

Q. How do I set my digital audio language?

A. Not only can you choose the language that displays on the screen buttons and descriptions, but you can also change the secondary digital audio that is available with certain networks and programs. Choose **Audio Setup** from the **Setup Menu** and change the default setting. Choose from English, Spanish, Portuguese or French. This feature is only supported on certain digital channels that provide secondary audio. If the chosen audio language is not available, the default audio language will be heard.

Q. What if I forget my Parental Controls/Purchase PINs?

A. You must call your local cable company to have these **PINs** reset. All of the **PINs** will be cleared. Once reset, you will need to enter new **PINs**.

Q. Why can't I purchase this Pay-Per-View (PPV) program?

A. There are several reasons that could keep you from ordering **PPV** events:

- your phone line might not be plugged in;
- you may have inadvertently made too many **PPV** orders, and may have to cancel one before making another order;
- you may have reached your credit limit. Call your cable company and have them check your account;
- your cable company may require you to call them to purchase a **PPV** event, instead of an automatic purchase through the set-top box.

Q. What if I missed a Pay-Per-View (PPV) movie/event that I ordered?

A. If your cable company provides impulse-ordering, you will not be billed for **PPV** on channels that aren't tuned. In cities that require phone ordering, you need to call your cable company to cancel **PPV** orders. Check with your cable company to confirm canceling procedures.

On Demand (Optional Feature)

Q. Do my Parental Controls & Purchase PIN settings stay the same for On Demand purchases as with regular programs?

A. Yes. **PINs** and settings apply to **On Demand** ratings and purchases.

Q. What if I only watched 15 minutes of my On Demand program and didn't get to watch the rest before it expired?

A. You will have to order it again. Refer to the **On Demand** section in this manual for more information on remaining rental and viewing times.

Q. If I get to the end of an On Demand program and want to watch it again, can I restart at the beginning?

A. Yes, as long as your viewing period has not expired, you may watch it as often as you like.

Q. How do I return to watching an On Demand program after I've tuned to another channel?

A. Select **My Rentals** from the **On Demand Menu** and choose the program you want to continue watching. You can either begin watching where you left off by selecting **Resume**, or start over with the **Restart**.

Q. Some of the programs appear in the listings with a checkmark or a dollar sign next to the title. What does this mean?

A. Depending on the services your cable provider offers, you may see a checkmark or a dollar sign to indicate a program you have ordered.

Q. How many On Demand programs can I order at one time?

A. Typically, there is no limit on purchases. Check with your cable operator for system-specific ordering information.

Q. I tried to order an On Demand program and received an error screen that said, "Unable to Process Request." What does this mean?

A. The "Unable to Process Request" message occurs when the set-top box is unable to communicate with the **On Demand** equipment at your cable company. Try turning your set-top box off and then on again. If the message appears again, note the time it appeared and the action you took and call your cable operator.

Q. When I selected a category from the On Demand Menu, I received a message that said, "No Program Listings Available." Why does this happen?

A. If there are no programs available for this particular category, this message will appear.

DVR and Digital Services

Q. I currently record programs on my VCR or DVD. How is a DVR different?

A. Your **DVR** Cable Box takes recording technology to a new level, capturing picture and sound digitally (for a superior result to tape-based recording) and allowing greater viewing flexibility. You can also press **Instant Replay** to review the last 15 seconds or rewind to see a scene again. Yet you won't miss a moment of the program, because the **DVR** keeps recording the current broadcast while you pause, rewind or replay scenes. No **VCR** or **DVD** can do that!

Q. How do I return to live TV when I'm watching recorded programming?

A. Simply press the **LIVE** or **▼** button on your remote.

Q. How do I record a Pay-Per-View (PPV) broadcast?

A. **Pay-Per-View** broadcasts must be ordered before they can be recorded. If you want to schedule a recording for a **PPV** event, take the following steps:

- a) From the Information screen, select the **Record Icon** (this will display the Order Program First overlay).
- b) Select the **Buy Icon**.
- c) Select the **Record This Program Icon**.
- d) Select the **Confirm Icon**.

This procedure orders the program and schedules the recording. If you change your mind you must cancel both the recording and order.

Note: You can also set up the recording from the listings by selecting the **PPV** event and pressing the record button on the remote and following steps b through d.

Q. How does the Parental Controls feature work?

A. Parental Controls allow you to block programs from being viewed. Locks are based on a program's title, rating and channel. See **Parental Controls** on page 17 of this manual.

Q. How can I find programs I want to record?

A. Using **i-Guide**, you can search many ways: through the **Main Menu**, **Quick Menu**, **Search Menu**, by programming category, through the **By Time** or **Channel Listings** grid or through the **Search Menu** to alphabetically search by Title. When you find something that sounds interesting, simply press **Record**. The **DVR** will automatically record that program for you.

Q. What kind of programs can I record?

A. You can record both standard and **High Definition** programs which are automatically interpreted by the **DVR**. Recording **HD** programs will take more storage space on your **DVR**. However, you must have **HD** equipment.

Q. I have a home theater system. Can I record a program in Dolby Digital™ 5.1 on my DVR?

A. As long as the program is being broadcast in Dolby Digital audio, the **DVR** will record the digital audio. A Dolby Digital indicator will appear on the **Flip Bar** and Program Information screen for programs that provide it.

Q. What is the picture quality of recorded programs?

A. The **DVR** records programs in the same quality in which they are broadcast. For example, programs broadcast in **HDTV** format are recorded in **HDTV** quality (if your **DVR** is connected to a **HDTV**). Broadcast quality may vary.

Q. Can I record Digital Music channels?

A. Yes. You can record and playback Digital Music. However, the playback controls (Pause, FF and REW) are not functional for recorded digital music.

Q. Can I record On Demand (OND) and Pay-Per-View (PPV) programs?

A. **On Demand** cannot be recorded with the **DVR**. However, you can record **PPV** programs.

Q. How many other home entertainment components can be connected to my Cable Box?

A. Three: your television, cable box (refer to your Motorola User Guide), and one other component (VCR, DVD player/recorder or audio).

Q. Do I have to connect my DVR to a telephone or other data source?

A. The **DVR** gets all the information it needs from your cable signal, so that's the only connection required. In some cable systems, a phone connection may be necessary. Check with your local cable company to confirm.

Q. Can I adjust the quality of the video recording to conserve hard disk space?

A. No. The **DVR** records at a pre-set level to ensure consistent results.

Q. Can my cable operator or another company track what I record with my DVR?

A. No. What you choose to record with the **DVR** is confidential.

DVR and Digital Services – Dual Tuner

Q. How many hours of programming can I store on my DVR? What is the hard drive capacity?

A. The recording capacity depends on the video format that is being recorded. Your Dual Tuner **DVR** can record up to 90 hours of standard definition programming or up to 20 hours of high-definition programming. The hard drive capacity is 120GB. See "Manage Your Personal Video Library" section in this manual for more information.

Q. How many tuners does my DVR have?

A. Your **DVR** has two tuners so that you can, 1) record two channels at the same time, 2) record one and watch another or 3) record two channels and watch a 3rd program from your **DVR** recordings library.

Q. Can I record or watch two programs at the same time?

A. Yes, you can use the **SWAP** button on your remote to change from one tuner to the other.

Q. Can the DVR play back a High Definition recording while another HD program is being recorded?

A. Yes. In fact, you can record two programs at once while watching a previously recorded program from the hard drive for both **HD** and regular programming.

Q. Are there separate buttons for each tuner? How do you make the Dual Tuner DVR record two programs at once?

A. **i-Guide** can record two different programs listed with overlapping times by pressing the **Record** button, by manually scheduling the recordings, or by setting future recordings from a Program Information screen.

Q. How much High Definition programming can I save versus standard definition programming?

A. You can record up to 90 hours of standard digital TV or up to 20 hours of **HDTV** (depending on the transmission bit rate). Recording times may vary.

Q. Does the DVR DCT6412 support digital video interfaces?

A. Yes. The DVR DCT6412 features both DVI and 1394-DTV digital interfaces.

Q. Does the DVR DCT6412 support external storage devices?

A. Yes. It includes an IEEE1394 port that will be functional in future software releases.

Dual Tuner DVR Recording and Playback of Recorded Programs

Q. How many recordings can I schedule for the future?

A. There is no limit to the number of recordings you can schedule as long as you do not schedule more than two programs to record at the same time and you have available recording space.

Q. What if the program I want to record runs over its scheduled air time such as when a football game goes into overtime. How can I make sure I record everything?

A. Change the **Recording Options** for the program. You can adjust the start and end times for the recording to ensure everything gets recorded.

Q. Can I watch a show I am recording before the recording is completed?

A. Yes. You can either watch it live as it's being recorded or you can rewind the program you are currently recording and watch it from the beginning while the recording continues.

Q. Can I make a VHS tape or DVD of a recorded program?

A. You can copy a recorded program to a VHS or DVD tape by playing a recording from the **DVR** in real time while simultaneously recording on your VCR or DVD. See "Manage Your Personal Video Library" in the **DVR** Section of this manual.

Q. Can I set up my DVR to record every episode of a specific program title?

A. Yes! Your **DVR** lets you record multiple episodes of a program according to your preference by setting up a **Series Recording**. Select the episode type to record, such as first-run only or all episodes. Specify how many recordings to save and how long to save the recording - until you erase it or until space is needed. To access advanced series setup features like add minutes to the start and end times and specify which channels to record, select the **Recording Options Icon** to review all options.

Tip: Use **Title Search** to find all air times for a particular title. You can then set up individual recordings for any or all episodes, no matter what time they're on.

Q. Can I increase the rewind and fast forward speed?

A. Yes. Your **DVR** will control rewind and fast forward at four speeds each. Just press the **REW** or **FF** buttons up to four times. The on-screen indicator will tell you at what speed you are controlling playback.

Q. Can I set the DVR to skip commercials as it is recording?

A. No. You can only fast forward through commercials if you're watching a recorded program.

Q. Can I “bookmark” a program I have recorded?

A. Yes. When you stop playback of a recorded program, it will stop where you left it. To continue watching the program, select **Resume** or **Restart** from the **Action Icons**.

Q. On occasion, a recording starts a minute or two after the program has begun. Why?

A. The **DVR** timer is synchronized with the program guide time. If a broadcaster starts the program a minute earlier than the guide's scheduled time, the **DVR** will miss that first minute. You can program your **DVR** to start early or end late by adjusting your **Recording Options**.

Q. Only part of my program recorded. Why?

A. If the beginning of the program did not record, you might have tuned to the program after it started and then set it to record. If the end of the program did not record, the **DVR** may have reached its storage capacity before it was able to record the entire program.

Q. Do Parental Controls work with DVR?

A. Yes. **Parental Controls** restrict viewing of recorded programs. If you schedule a recording for a program you have Locked, the program will be recorded; however, audio is muted and no video will appear while the program is recording. A restricted notice remains on screen allowing you to enter your **PIN** to view the program during the recording. Once the program has been recorded, you can access it from **My Recordings**. Just enter your **PIN** to view.

Note: You can also set **Parental Controls** on recorded programs. Use the **LOCK** button on your remote or **Lock Icon** from **My Recordings** or from a Recorded Program Information screen.

Single Tuner DVR Recording and Playback of Recorded Programs**Q. How many recordings can I schedule for the future?**

A. There is no limit to the number of recordings you can schedule as long as you do not schedule more than one program to record at the same time and you have available recording space.

Q. What if the program I want to record runs over its scheduled airtime such as when a football game goes into overtime. How can I make sure I record everything?

A. Change the **Record Options** for the program. Just adjust the start and end times for the recording to ensure everything gets recorded.

Q. Can I watch another program while I'm recording?

A. You can watch a previously recorded program while you are recording a live program by accessing the **DVR** menu. However, if you change channels you will see a screen asking you to confirm you want to change the channel and stop the recording.

Q. Can I watch a show I am recording before recording is completed?

A. Yes! You can either watch it in “real time” as it's being recorded or you can rewind the program you are currently recording and watch it from the beginning while the recording continues.

Q. Can I transfer a recorded program to a VCR or DVD?

A. Yes. As you are watching a program you have recorded on your **DVR**, you can record it to a tape or DVD. See “Managing Your Personal Video Library” in the **DVR** section of this manual.

Q. Can I set up my DVR to record every episode of a specific program title?

A. Yes! Your **DVR** lets you record multiple episodes of a program according to your preference by setting up a **Series Recording**. Select the episode type to record, such as first-run only or all episodes. Specify how many recordings to save and how long to save the recording - until you erase it or until space is needed. To access advanced series setup features like add minutes to the start and end times and specify which channels to record, select the **Recording Options Icon** to review all options.

Tip: Use **Title Search** to find all air times for a particular title. You can then set up individual recordings for any or all episodes, no matter what time they're on.

Q. Can I schedule a recording for two shows airing at the same time?

A. Currently, your **DVR** can only record one program at a time. If you try to schedule a recording at the same time you have scheduled another, you will see a **Scheduling Conflict** message that gives you the opportunity to change your **Recording Options**.

Q. Can I increase the Rewind and Fast Forward speed?

A. Yes. Your **DVR** will control rewind and fast forward at four speeds. Just press the **REW** or **FF** buttons up to four times. The on-screen indicator will tell you at what speed you are controlling playback.

Q. Can I set the DVR to skip commercials as it is recording?

A. No. You can only fast forward through commercials if you're watching a previously recorded program.

Q. Can I "bookmark" a program I have recorded?

A. Yes! When you stop playback of a recorded program, it will stop where you left off. To continue watching the program, select **Resume** or **Restart** from the **Action Icons**.

Q. On occasion, a recording starts a minute or two after the program has begun. Why?

A. The **DVR** timer is synchronized with the program guide time. If a broadcaster starts the program a minute earlier than the program guide's scheduled time, the **DVR** will miss that first minute. You can program your **DVR** to start early or end late by adjusting your **Recording Options**.

Q. Only part of my program recorded. Why?

A. If the beginning of the program did not record, you may set it to record after the program began. If the end of the program did not record, the **DVR** may have reached its storage capacity before it was able to record the entire program.

Q. Do Parental Controls work with DVR?

A. Yes. **Parental Controls** restrict viewing of recorded programs. If you schedule a recording for a program you have **Locked**, the program will be recorded, however audio is muted and no video will appear while the program is recording. A restricted notice remains on screen allowing you to enter your **PIN** to view the program during the recording. Once the program has been recorded, you can access it from **My Recordings**. Just enter your **PIN** to view.

Note: You can also set **Parental Controls** on recorded programs. Use the **LOCK** button on your remote or **Lock Icon** after you have selected the program from **My Recordings** or you can select the **Lock Icon** from an **Information Screen**.

Managing Your Recordings

Q. How long can I keep My Recordings?

A. You can keep them as long as you want. Just remember, the recording space is limited, so you may need to delete some recorded programs from time to time in order to make room for new ones.

Q. How will I know when I'm almost out of recording space?

A. An on-screen notice will appear advising you when recording space is low (80% full) or full.

Note: If you are recording a program and run out of recording space, the recording will stop. You can always see how much recording space is available from **My Recordings**. You can also manually delete recordings or set your **DVR** to automatically delete recorded programs when space is needed. See: "Manage Your Personal Video Library" section in this manual.

Q. Does the DVR automatically delete programs when the record space is full?

A. Only if you set it up that way. The **DVR** will automatically delete programs if you tell it to do so by setting the programs to be deleted when space is needed. When the record space is full, the oldest recordings that you have set to be deleted will be deleted first. If you do not want the **DVR** to automatically delete certain recordings, you can set them so that they are only deleted by you.

Controlling Live TV

Q. How long can I pause live TV?

A. You can pause up to 90 minutes of standard programming; less with **HD** programming.

Q. How far back can I rewind live TV?

A. You can rewind up to two hours of standard TV programming as long as you were tuned to the same channel.

Q. How do I use Instant Replay?

A. If your remote control is equipped with a **REPLAY** button, press it to instantly replay the last 15 seconds of the program. If there is no **REPLAY** button, use the **PAGE** ▾ button on your remote.

Q. If I'm watching a program in progress and want to record it, can I record from the beginning?

A. If you just tuned to the program, the **DVR** begins recording from the point where you pressed record on your remote. If you have been watching the program from the beginning and have not changed channels (without using **SWAP**), the **DVR** will save all the temporary recording (buffer) to the Hard Drive and you will capture the entire program.

Q. How can I catch up to the live broadcast of a program after I've paused it?

A. Press the **LIVE** button (if available) or the down ▾ arrow on the remote. Or, you can fast forward to the point of live TV. The on-screen indicator will display "LIVE".

Troubleshooting

Q. Why doesn't the set-top box respond when I press the keys on my remote?

A. If power is on, make sure your remote is in the Cable mode. Press the **CABLE** button on the remote.

Q. If the power goes out, do I need to reset my Parental Controls and Purchase PINs, Favorites and Reminders?

A. No. These features will not be lost if the terminal loses its power. However, the guide information will need to reload into the box.

Q. Nothing happens when the MENU button is pushed, but I can change the channel up and down.

A. If the terminal was just installed, it takes approximately 15-30 minutes for **i-Guide** to be downloaded to the set-top. If after 15-30 minutes nothing happens, unplug the terminal, plug it back in and wait another 15-30 minutes. If the guide still does not appear, contact your cable company.

Q. I can't see the edges of the i-Guide screens.

A. Select the **Adjust Screen Position** option from the **Setup** screen. Press the ▲▼◀▶ buttons until the arrows on the screen are centered. If image is centered and still cut off, check your TV's user manual.

Q. The guide has locked up. Neither the buttons on the remote, nor the buttons on the terminal itself work.

A. Try unplugging the terminal and then plugging it back in. This will reset the terminal and allow for data to be downloaded. It will take some time for the information to appear. If there is still a problem after the information has appeared, call your cable company.

Q. I have no video, a snowy picture or I cannot tune to any of the digital channels.

A. Make sure that all of the cable connections are secure and that the TV is tuned to the correct channel (3 or 4). Also, make sure you are actually controlling the cable terminal (press the **CABLE** button on the remote).

Q. Why won't my remote control respond when I press a button?

A. Go through this quick checklist to determine the problem:

1. Press the **CABLE** button on the remote to make sure it is in Cable mode. Try using the remote again.
2. If the remote is still not functioning correctly, press the **CHAN** ▲▼ button on the front of the terminal. If the channel changes, there is a problem with the remote control. The batteries or the remote control itself may need to be replaced.
3. Unplug the terminal and plug it back in.
4. Call your cable company.

Q. There are no listings in the guide, or the words “To Be Announced” appear in the listings screens.

A. This can happen if there has been a power failure or if the terminal was unplugged. Make sure everything is plugged in and running. Wait 15-30 minutes for the channels and program data to load.

Q. I have a message on my screen that says “This feature is currently being restored”. What does this mean?

A. This screen appears if you try to access a feature that is not available because the terminal has not received all the necessary data. This most commonly happens following a power loss.

Q. I have a message on the screen that says “This channel should be available shortly”. What does this mean?

A. This screen will appear when you tune to a channel that is currently not available. If the channel is not available after 15-30 minutes, call your cable company.

Q. What do I do if I am stuck in a screen or menu I do not understand and want to get out?

A. You can always press the **EXIT** button on the remote to immediately return to watching TV. You can also press the **LAST** button to back up one screen at a time.

Q. The displayed information or pricing is incorrect.

A. Although **i-Guide** checks all data thoroughly before it is sent to your home, programmers do sometimes change their schedules at the last minute without notification. Please report erroneous data to your cable company.

Q. What happens to my DVR recordings if my digital cable box temporarily loses power?

A. All recordings that were saved prior to the power loss are preserved, as well as future recording schedules. You miss only the recordings in progress while the power was out.

Note: If you experience continued problems with your cable box, remote control or interactive program guide, please contact your local cable company.

