


NOT TO SCALE

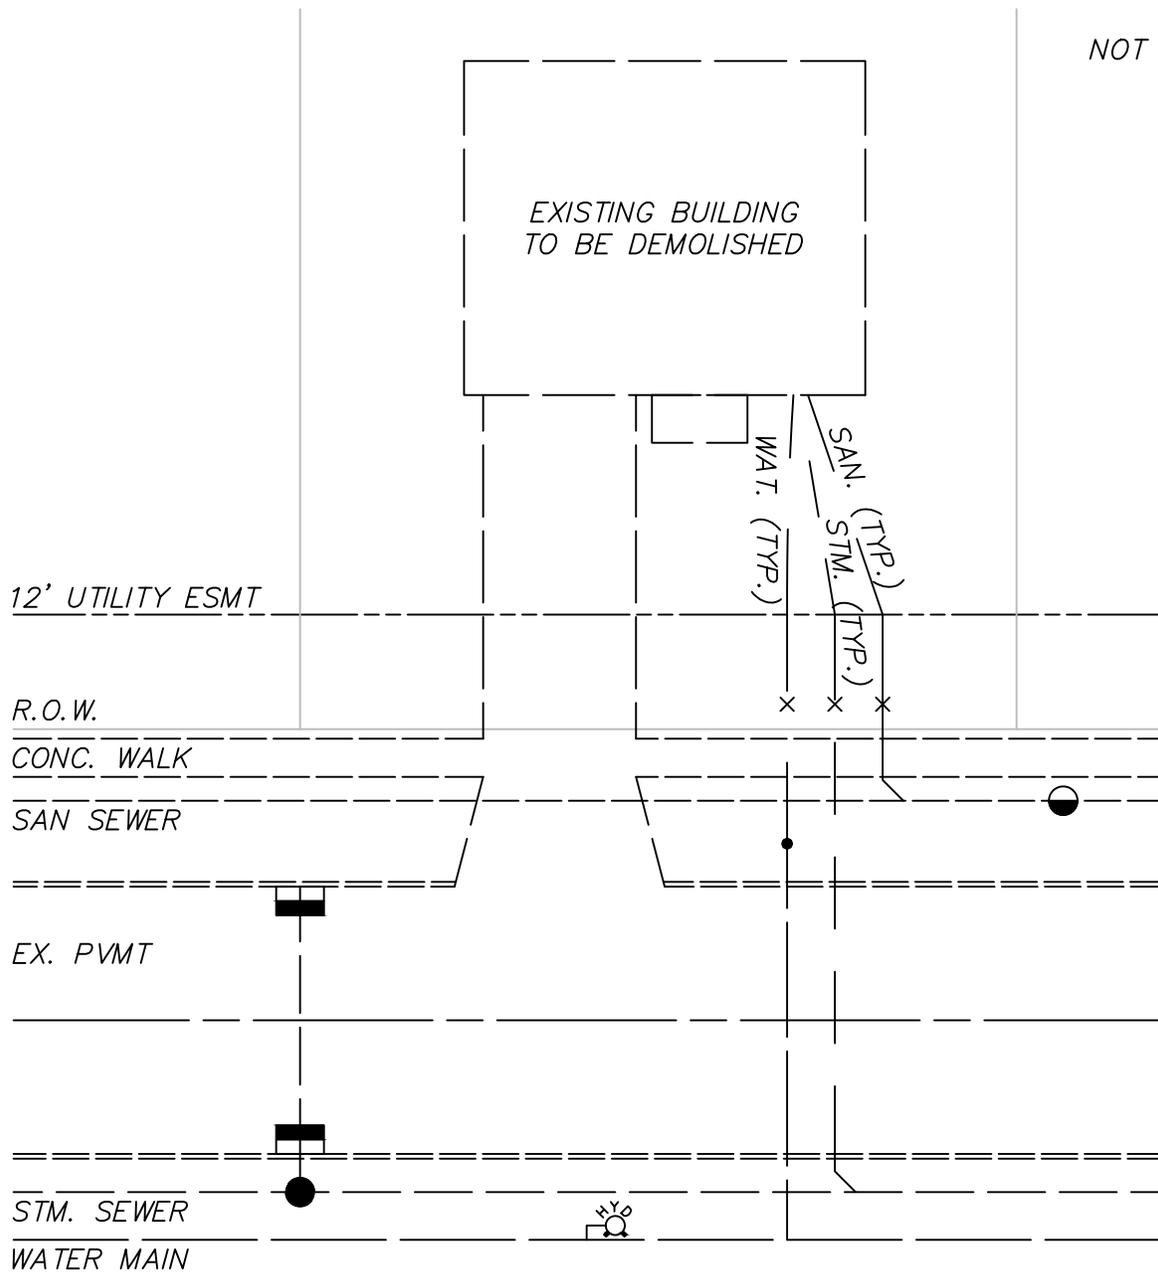

NOTES:

1. UPON PURCHASE OF A DEMOLITION PERMIT, THE CONTRACTOR MUST CONTACT ALL NECESSARY UTILITIES TO SCHEDULE INSPECTIONS OF ABANDONED LATERALS.
2. WATER SERVICE BOXES MUST BE SHUT OFF AND CUT AT THE RIGHT-OF-WAY THEN THE CORPORATION STOP MUST BE SHUT OFF AT THE MAIN.
3. SANITARY AND STORM LATERALS MUST BE CUT AT THE RIGHT-OF-WAY LINE AND CAPPED OR MORTARED CLOSED.
4. IF A CLAY LATERAL IS TO BE REUSED, IT MUST BE VIDEO TAPED AND A COPY PROVIDED TO THE ENGINEERING DEPT. FOR APPROVAL PRIOR TO THE INSTALLATION OF THE NEW LATERAL.
5. IF WATER SERVICE IS UNDER EX. PAVEMENT, ABANDONMENT PROCEDURE SHALL BE DETERMINED BY THE CITY ENGINEER. SEE PIPE-01 FOR REPAIR DETAILS.